


Thank you very much for purchasing this product.
This Instruction Manual features operating methods, as
well as precautions for safe handling of the product.
Please read this Instruction Manual before use. After
reading, keep this manual safe for future reference.

*This product is not a medical equipment.
This product cannot analyse if you are ill or not.

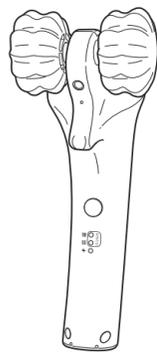

Attached documents and
Instruction Manual (this document)

Safety Precautions (Be sure to always follow these precautions)

Read the following precautions thoroughly to prevent property damage or harm to you or other people.

■ In the following table, degrees of possible damage or risk caused by misusing this product against the precautions are described.


	WARNING	Matters described with this symbol indicates that there is "high probability of death or serious injury can be anticipated".
	CAUTIONS	Failure to observe Cautions may result in personal injury or property damage.

- This symbol indicates a prohibited action.
- This symbol indicates a mandatory action.

WARNING	
	Any person whose condition corresponds to any of the following should consult a doctor prior to use. <ul style="list-style-type: none"> • People who are using implantable medical electrical devices that are susceptible to electromagnetic interference such as pacemakers • People currently receiving medical treatment from a doctor, especially those experiencing particular abnormal bodily symptoms • People who have malignant tumours (cancer) • People with heart disorders • Pregnant women or those who have just given birth • People who have perceptual dysfunctions arising from a high degree of peripheral circulatory failure due to diabetes or the like • People with skin wounds • People that need to remain rested • People with a body temperature of 38°C or higher (during fever) <ul style="list-style-type: none"> ※ Example 1: Acute inflammatory of symptoms (e.g. fatigue, chills and blood pressure fluctuation) ※ Example 2: When feeling weak • People with osteoporosis, acute (painful) conditions such as a fractured spine, strained or pulled muscles • People with an abnormal spine or people whose spine is turning to the left or right • People with disc herniation • Other, if you are particularly aware of a physical problem, or are being treated by a medical institution • People perceiving no effect following a significant period of use It will cause accidents or health problems.

Names of individual components

■ **Main unit**

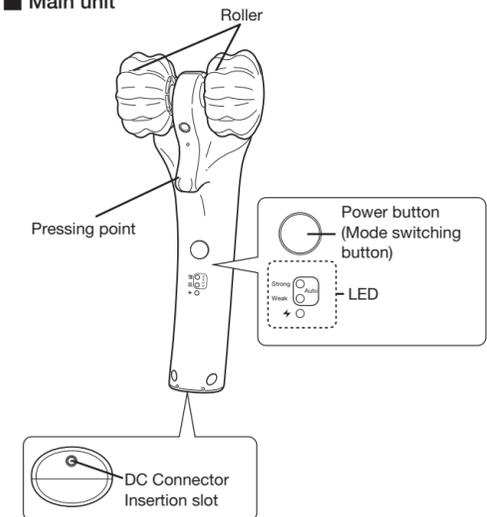

■ **Dedicated USB Cable**



WARNING	
	The following people must not use this product: <ul style="list-style-type: none"> • People whose doctors have prohibited them from receiving a massage <ul style="list-style-type: none"> ※ Example: Those with a blood clot (embolus) disease, a severe aneurysm, acute varicose, various types of dermatitis, or skin infections (including hypodermics inflammation.) Etc., It may lead to a deterioration of symptoms.
	Please do not use this for anything other than the intended purpose. Also, do not use on the head, face, chest, belly, bony area (elbow, knee, etc.), pubic area. It could cause accidents or injuries.
	Please do not use the Roller or Pressing point by pressing with excessive force. It could cause accidents or injuries.
	Do not use this product on people who cannot give their consent for use or cannot operate it by themselves. Do not let children use or play with this product. Do not store or use this product in a place where children can reach it. It could cause accidents, device malfunctions, or injuries. In the event that parts are swallowed, consult a doctor immediately.
	Do not use this product by standing on the body or sitting on it. It could cause accidents, device malfunctions, or injuries.
	Do not use the product together with any other therapeutic apparatuses. Doing so can cause poor physical health and can make the user feel unwell.
	Do not disassemble, repair or modify the product. There is a risk of fires or electric shock.


CAUTIONS	
	Do not use for more than 10 minutes per day. Also, do not use for more than 3 minutes in 1 place. It will cause accidents or health problems.
	Be sure to hold this product in your hand. It could cause accidents, device malfunctions, or injuries.

Preparation


Be sure to charge the product until it is fully charged prior to using the product (immediately after purchasing the product or when the product has not been used for a long time) or when the charge is depleted from use.

Charging

- ① Plug the DC connector of the special USB cable into the DC connector insertion slot of the main unit.
- ② Connect the USB A connector of a special USB cable to the USB port described below and turn on the power.
※ When properly connected the LED flashes as the figure in the lower right.

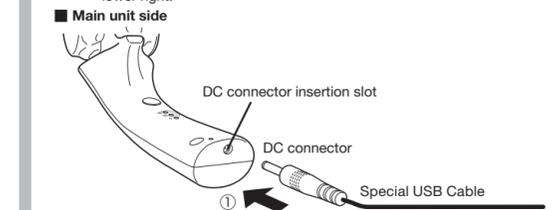

■ **Connect to PC**
USB2.0, USB3.0 or USB3.1 port on PC that meets the IEC60950 standard

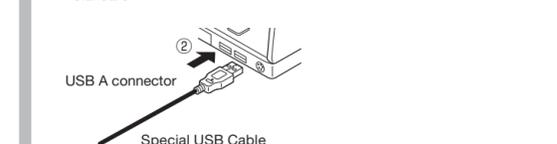

CAUTIONS	
	If you feel anything unusual during use, stop using it immediately and consult a doctor. It will cause accidents or health problems.
	After use, turn off with the power button. It could cause accidents or injuries.
	If you find a defect, please stop using it immediately, turn off the power, and contact your dealer as it could cause electric shock and other injuries. It could cause accidents or injuries.
	Do not use in the following ways. <ul style="list-style-type: none"> • When severely fatigued • When under the influence of alcohol • When eczema is occurring It could lead to poor physical conditions.
	Do not use this product for 1 hour after or before meals. It could lead to poor physical conditions.
	Do not sleep during use. It could cause accidents or injuries.
	Do not use while in your futon (or bed), in a kotatsu (Japanese heated table), or covered with a blanket. Also, do not use it near heating devices, such as a heater, or when smoking. It will cause fires or a rise in motor temperature.
	Do not attach accessories or hard things to this product. It could cause injuries.
	Do not drop the product nor subject it to strong impacts. Such use could cause an electric shock, injury, or device failure.
	When cleaning, do not use benzene, paint thinner, alcohol or hot water. It may cause discolouration or deformation.
	Do not use the product in places with high humidity, such as bathrooms, and underwater. Such use could cause an electric shock, fires, or device failure.

Charging time: Approx. 2 hours

CAUTIONS:

- The use of a travel converter or any other power converter to charge the device may cause overheating or fires.
- Never use the product when the main unit's DC connector insertion slot is wet.
- The product cannot be operated while charging.
- The operable time will gradually decrease as you repeat charging. If the operation time becomes extremely short, the battery has expired but it is not replaceable.

LED
The colour of the LED light changes depending on the remaining amount of battery as shown below.


[0 to 30%]	[30 to 80%]
Strong (Flashing)	Strong (Auto)
Weak (Flashing)	Weak (Auto)
[80% -]	[Fully charged]
Strong (Auto)	Strong (Auto)
Weak (Auto)	Weak (Auto)

Legend:
○ Off
⚡ Flashing
● Continuously lit


CAUTIONS	
	Do not use the product during operation of a car, motorcycle, bicycle, etc. It will cause accidents or problems.
	Avoid touching the DC insertion slot with any part of your body such as a hand or a finger. Such use could cause an electric shock or device failure.
	Do not insert any metallic objects into the DC connector slot. It will cause fires or heat generation.
	Avoid excessive pulling or bending of the USB cable, or placing heavy objects on the cable. Doing so can cause damages, cable disconnection, fires, and electric shock.
	Do not use if the dedicated USB cable is damaged, or the DC connector insertion slot is loose. It will cause fires or electric shock.
	Do not charge the product using a transformer, such as a travel converter. It will cause fires or heat generation.
	Do not charge it inside a car using a cigar socket. Doing so can cause fires, heat and device failure.
	Do not touch the cable with a wet hand. If this is not done it can cause electric shocks and accidents.
	Do not use a special cable for purposes other than charging the base unit.
	Never charge while the main unit is wet. Doing so can cause heating, electric shock, and fires.
	Use the product after verifying that the power button operates normally.
	Verify that the product operates normally and safely before use according to the operations described by the Instruction Manual when using the product for the first time or if the device has not been used for a while.
	Before use, make sure there are no cracks or breakage on the main body and there is no breakage on power button. Waterproof ability would be affected and it could cause electric shock, fires, or device failure.

How to use

Put pressure on the Roller while rolling against the whole part you want to use.

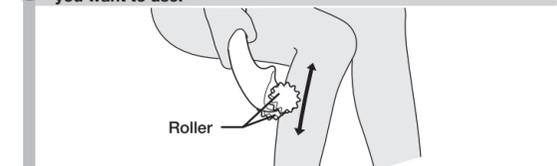


Press the Pressing point over the part you want to use.

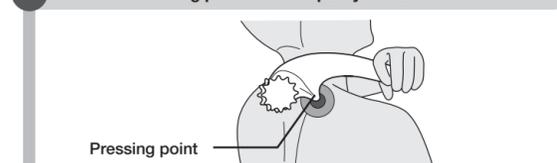

Turn on the vibrator, and use it with the Roller or the Pressing point.

- ① **Turning the power on.**
Press and hold the power button for about 1 second to turn on the power and start the operation.
The "Weak" LED light turns on.

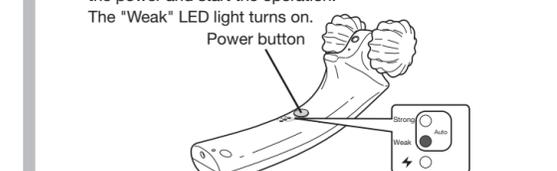

CAUTIONS	
	Securely insert the special USB cable to the root when charging. Charging with improper insertion slots can cause fires or electric shocks.
	Do not pull on the cord but instead hold the connector when removing the special USB cable from the main unit. Failure to do this could cause an electric shock, short circuit, or device failure.
	Charge at least once in 3 months. After it is completely discharged, charging might be impossible.
	If a power failure occurs during charging, stop charging immediately. If this is not done it can cause electric shocks and accidents.
	When disposing of this product, please do so in accordance with the regulations of your municipality.
	Please make sure to read the Instruction Manual carefully before use. Also, please check the device for any abnormalities.
	Keep this product clean so as to not affect its next usage and store in a place with low humidity.

About this product


■ **Intended use or purpose**

By providing stimulation to the body with an electric roller, this equipment makes you feel refreshed and relaxed.
This product should be used at home.

■ **Estimated usage time**


Approximately 10 minutes a day is the estimated usage time. Continuing use on any particular area beyond 3 minutes can cause poor health.
This product has a built-in timer that automatically turns off power after about 5 minutes of use.

- ② **Switching mode**
Press the power button during operation to switch between modes.
When the power button is pressed, the product mode switches in the manner described below.
※ When the power is turned on the device starts in "Weak".

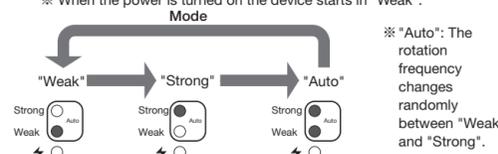

※ "Auto": The rotation frequency changes randomly between "Weak" and "Strong".

- ③ **Turn off the device.**
After about 5 minutes from the start of operation, the power will be turned off automatically.
※ To turn off the power during operation, press and hold the power button for about 1 second.

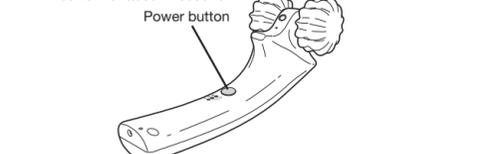


CAUTIONS:

- If pain occurs at the time of usage, please use a towel, etc.
- Do not leave the product in a location with high temperatures or humidity, where it is exposed to direct sunlight, or is within the reach of small children.

■ **Recommended time to use**

When the body is warm after bath.
Since this product has been given waterproofing equivalent to JIS IPX6, it can be used with confidence even if the body is wet.

Example of Use

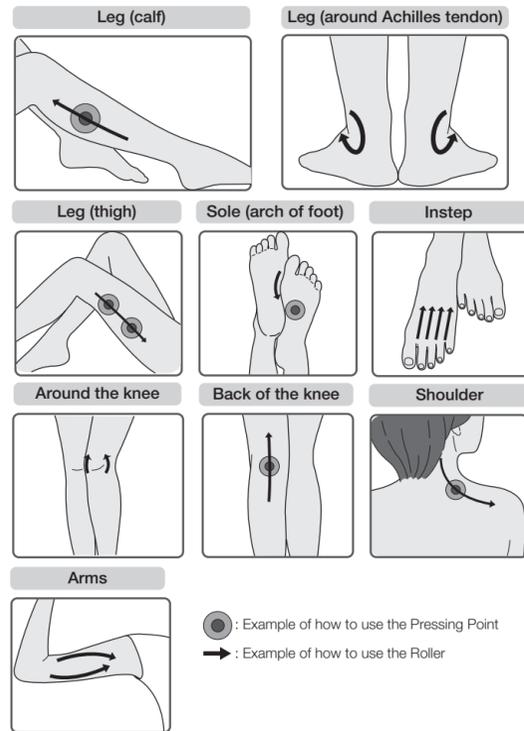


● : Example of how to use the Pressing Point
 → : Example of how to use the Roller

13

Maintenance

- If you are concerned about dirt, remove the Roller and rinse in the shower.

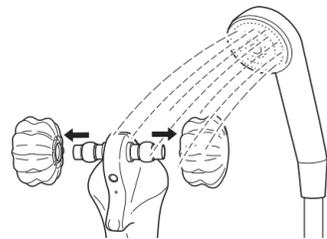

After washing, please wipe out all of the moisture and place it in a place not exposed to direct sunlight and with good ventilation.

CAUTIONS:

Take care not to allow water to enter the Main Unit or the DC connector port.

- When it is really dirty, remove the Roller, add a small amount of neutral detergent diluted with lukewarm water on a soft cloth, squeeze well and wipe off the dirt. After that, wipe the product well with the squeezed cloth and then wipe gently with a dry cloth.
- Do not use benzene, paint thinner, alcohol or hot water. It will cause discoloration or deformation.

CAUTIONS:

After cleaning, store the device in a place with little humidity. (If this product is left in a bathroom, condensation and rust may occur inside of the main unit and cause device failure)



14

How to store

Please keep this product in an environment that meets the following conditions.

Storage temperature: -10°C to 60°C

Storage humidity: 20% to 85% RH

Caution when storing

- Do not store the product in locations described below.
 - A place with direct sunlight
 - In high temperature or high humidity areas, near water, or in dusty areas
 - Places with a lot of vibration
 - Locations where chemicals are stored or where corrosive gases are generated
- Place the product at a location that is out of reach of children.
- If not using for a long period of time, store the product fully charged, and try to keep at room temperature (10°C to 30°C).
- Charge the battery at least once every 3 months. After it is completely discharged charging might be impossible.

Checks concerning care	Inspect the product that has been used for many years!
<p>Have you noticed any of the following?</p> <ul style="list-style-type: none"> Abnormal sound or vibration during charging or operation The Main unit becomes extremely hot The Main Unit shows changes in shape or gives off a burning smell 	<p>Use Stop</p> <p>To prevent accidents, turn off the power or unplug the dedicated USB cable, and arrange for the dealer to perform an inspection.</p>

15

Disposal

Regarding the recycling of lithium-ion batteries



A lithium ion battery is built into the product. Lithium ion batteries are precious resources that can be recycled, so we request for your cooperation in recycling. When disposing of this product, please do so in accordance with the regulations of your municipality.

- Do not disassemble the battery when disposing of it.
- Do not dispose of the device in regular household waste. The destroyed lithium ion battery inside a garbage truck causes a short circuit and may lead to a fire or heat generation.

How to take out a lithium ion battery


Do not disassemble this product unless you are disposing of it.

WARNING

The following procedure outlines the steps taken to dispose of the product and is not intended for. It is impossible to repair this product when disassembled.

- When there is charge remaining, please use until the battery is fully discharged.
- Using a screwdriver, disassemble according to the following procedure.

- Remove the 3 silicon caps on the screws holding part of the main unit and then remove the screws
- Remove the case cover

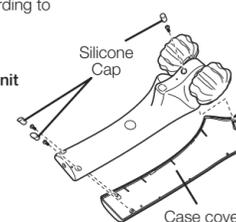


16

Limitation of Liability


- In no event will ELECOM Co., Ltd be liable for any lost profits or special, consequential, indirect, punitive damages arising out of the use of this product.
- ELECOM Co., Ltd will have no liability for any loss of data, damages, or any other problems that may occur to any devices connected to this product.

Those customers who purchased this product outside Japan, please contact the local shop. ELECOM CO.,LTD. shall not respond to any inquiry from customers who purchased/use this product outside Japan, nor provide any support to them. Please note that our support is given only in the Japanese language. Replacement of products is available based on our guarantee regulations, however, this service is limited to Japan.
 * Spare parts for repairs are available for a minimum of five years after the production of the product is discontinued.

- Remove the silicon cap and remove the 6 screws holding the inner cover

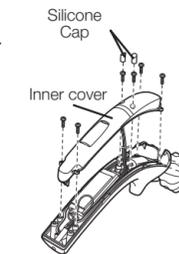


- Remove the 2 screws on the plate holding the battery

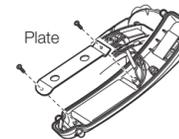

- Cut off the negative black cord from the battery located on the reverse side of the substrate one by one, using a pair of cutting nippers

※ Please be careful because it will short-circuit if you cut the cords all at once.

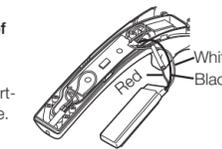

- Remove the battery

- Be careful not to short-circuit the terminals of each cord. Tape the terminal ends to isolate them.

17

Troubleshooting

Troubles	Causes	Solutions
The motor makes noise during operation		There is no influence on the functions, etc. from the structural things.
Does not turn on	Did not give a long press on the power button for about 1 second	Give a long press on the power button for about 1 second. ➔ P.11
	Battery is not charged fully or there is no power left in battery	Charge the battery ➔ P.9, P.10
	The battery is charging	Once the battery has been charged, remove the special USB cable before using the product. ➔ P.9, P.10
Does not turn on		Charge the battery. If the product still does not operate, there is a malfunction inside the product. Stop using the product and contact a retailer. ➔ P.9, P.10
	Did not give a long press on the power button for about 1 second	Give a long press on the power button for about 1 second. ➔ P.12
Power turns off soon after it is turned on Power goes off during use	Battery is not charged fully or there is no power left in battery	Turn off the power and charge the battery. ➔ P.9, P.10
	Dislodged special USB cable	Connect the special USB cable. ➔ P.9, P.10
The battery does not charge	Battery completely discharged after storing product for a long period	The product can no longer be used. Charge the product at least once in 3 months to prevent a complete discharge. ➔ P.15, P.16, P.17
	"Weak" and "strong" LEDs are flashing during operation	Turn off the power and charge the battery. Nevertheless, when the product does not work, there should be an internal failure. Please stop using the product and contact the retailer.

18

Product specifications

Power supply voltage	DC 5.0V
Built-in battery	Lithium-ion battery (1000 mAh *1 *2)
Number of charge cycles	Approx. 500 times *1
Charge time	Approx. 2 hours *3
Operating time	Approx. 3 hours (with full charge) *4
Rated Electric Power Consumption	Approx. 2W
Timer	Approx. 5 minutes
Vibration frequency	Strong: Approx. 6200 times/minute, Weak: Approx. 5400 times/minute
Waterproof performance	Equivalent to IPX6 *5
Dimensions (W x D x H)	89 mm x 74 mm x 220 mm
Cable length	Approx. 0.5 m
Main unit weight	Approx. 270g
Materials	Main unit: ABS resin Roller: Silicon rubber
Operating temperature/humidity	0°C to 40°C; 20% to 85% RH
Storing environment temperature and humidity	-10°C to 60°C; 20% to 85% RH

- *1 According to JIS C 8711
- *2 With protection function for over-charging, over-discharging and over-voltage
- *3 Standard when charging fully discharged battery to full power
- *4 Depends on operation and environment
- *5 Excluding charging

20

ELECOM CO., LTD.

www.elecom.co.jp/global/
 ELECOM Sales Hong Kong Ltd.
 2/F, Block A, 2-8 Watson Road,
 Causeway Bay, Hong Kong
 TEL : +852 2806 - 3500
 FAX : +852 2806 - 3300
 email : info@elecom.asia
 新加坡(上海)商贸有限公司
 上海市徐汇区肇嘉浜路1065甲号1603H室
 电话 : +86 (0) 21-33680011
 www.elecom.cn

- The copyright of this manual is owned by ELECOM Co., Ltd.
- Unauthorized reproduction/reprint of all or part of this manual is prohibited.
- If you have comments or questions about this User Manual, please contact dealers.
- The specifications and appearance of this product may be changed without prior notice for product improvement purposes.
- We shall bear no responsibility for any device failure or malfunction of other devices resulting from the use of this product.
- Permission for export or service transaction under the Foreign Exchange and Foreign Trade Control Act is required in order to export this product or parts of this product that constitute strategic materials or services.
- Company names, product names, and other names in this manual are generally trademarks or registered trademarks.

A customer who purchases outside Japan should contact the local retailer in the country of purchase for enquiries. In "ELECOM CO., LTD. (Japan)", no customer support is available for enquiries about purchases or usage in any countries other than Japan. Also, no foreign language other than Japanese is available. Replacements will be made under stipulation of the Elecom warranty, but are not available from outside of Japan.

ECLEAR corol
 Instruction Manual and Safety precaution for use in Hong Kong and the Philippines
 1st edition, May 28, 2019

ELECOM

©2019 ELECOM Co., Ltd. All Rights Reserved.

MSC-HCM-V01R_HK_PH_en_ver.111

22