


How to charge a device such as a smartphone, tablet, or PC

1. Connect the charging cable to this product and connect the other end to the device you want to charge.
2. Plug the product into a household outlet to start charging.

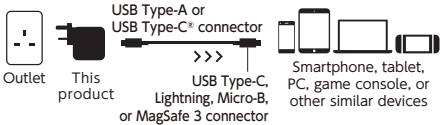

*Your device may charge more slowly or not charge at all if a connector or cable that converts to a terminal other than USB Type-C, Lightning, Micro-B, and MagSafe 3 is used.


*When the device to be charged is connected to an open port while this product is in use, the output of the connected port may temporarily drop and reconnect.

When the smartphone starts charging, you may hear a charging start sound. It is not a malfunction.

Specifications

USB port type	USB Type-C port x 3 and USB Type-A port x 1
Input	110 to 240 V AC, 50/60 Hz, 3 A
Output	Using one port
	■USB Type-C port 1/2: 100 W max (5 V/3 A, 9 V/3 A, 12 V/3 A, 15 V/3 A, 20 V/5 A)
	■USB Type-C port 3: 30 W max (5 V/3 A, 9 V/3 A, 12 V/2.5 A, 15 V/2 A)
	■USB Type-A port 1: 18 W max (5 V/3 A, 9 V/2 A, 12 V/1.5 A)
	Using two ports simultaneously
	[USB Type-C port 1 + USB Type-C port 2]
	■USB Type-C port 1: 65 W max (5 V/3 A, 9 V/3 A, 12 V/3 A, 15 V/3 A, 20 V/3.25 A)
	■USB Type-C port 2: 30 W max (5 V/3 A, 9 V/3 A, 12 V/2.5 A, 15 V/2 A, 20 V/1.5 A)
	[USB Type-C port 1/2 + USB Type-C port 3]
	■USB Type-C port 1/2: 65 W max (5 V/3 A, 9 V/3 A, 12 V/3 A, 15 V/3 A, 20 V/3.25 A)
	■USB Type-C port 3: 30 W max (5 V/3 A, 9 V/3 A, 12 V/2.5 A, 15 V/2 A)
	[USB Type-C port 1/2 + USB Type-A port 1]
	■USB Type-C port 1/2: 65 W max (5 V/3 A, 9 V/3 A, 12 V/3 A, 15 V/3 A, 20 V/3.25 A)
	■USB Type-A port 1: 18 W max (5 V/3 A, 9 V/2 A, 12 V/1.5 A)
	[USB Type-C port 3 + USB Type-A port 1] 15 W max (5 V/3 A) in total
	Using three ports simultaneously
	[USB Type-C port 1 + USB Type-C port 2 + USB Type-C port 3]
	■USB Type-C port 1: 45 W max (5 V/3 A, 9 V/3 A, 12 V/3 A, 15 V/3 A, 20 V/2.25 A)
	■USB Type-C port 2: 18 W max (5 V/3 A, 9 V/2 A, 12 V/1.5 A)
	■USB Type-C port 3: 30 W max (5 V/3 A, 9 V/3 A, 12 V/2.5 A, 15 V/2 A)
	[USB Type-C port 1 + USB Type-C port 2 + USB Type-A port 1]
	■USB Type-C port 1: 45 W max (5 V/3 A, 9 V/3 A, 12 V/3 A, 15 V/3 A, 20 V/2.25 A)
	■USB Type-C port 2: 18 W max (5 V/3 A, 9 V/2 A, 12 V/1.5 A)
	■USB Type-A port 1: 18 W max (5 V/3 A, 9 V/2 A, 12 V/1.5 A)
	[USB Type-C port 1/2 + USB Type-C port 3 + USB Type-A port 1]
	■USB Type-C port 1/2: 65 W max (5 V/3 A, 9 V/3 A, 12 V/3 A, 15 V/3 A, 20 V/3.25 A)
	■USB Type-C port 3 + USB Type-A port 1: 15 W max (5 V/3 A) in total
	Using four ports simultaneously
	[USB Type-C port 1 + USB Type-C port 2 + USB Type-C port 3 + USB Type-A port 1]
	■USB Type-C port 1: 45 W max (5 V/3 A, 9 V/3 A, 12 V/3 A, 15 V/3 A, 20 V/2.25 A)
	■USB Type-C port 2: 18 W max (5 V/3 A, 9 V/2 A, 12 V/1.5 A)
	■USB Type-C port 3 + USB Type-A port 1: 15 W max (5 V/3 A) in total
External dimensions	Approx. W48.5 x D97.4 x H74.4 mm
Weight	Approx. 235 g
Operating temperature	0 to 25 °C
Contents	Main unit *No charging cable is included. Please purchase or prepare one separately.

Ports and wattage

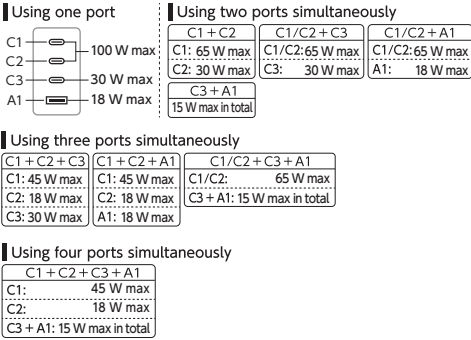

*C1: USB Type-C port 1; *C2: USB Type-C port 2; *C3: USB Type-C port 3; *A1: USB Type-A port 1

*This product's output may be suspended for safety purposes in some conditions such as temperature rise. As this is not a malfunction, disconnect the product from the connected device, wait a short while, then connect again.

*The output values and charging time may change depending on the specifications and conditions of the connected devices. This product may operate under another standard that is not USB Power Delivery, depending on the combinations of devices connected to two or more ports.

See the product specifications for details regarding output distribution.

*The images are for illustration purposes only and may differ from your actual product.

*In order to make improvements to this product and for improved safety, the colors and specifications are subject to change without prior notice.

*The company and product names on the packaging are, in general, trademarks or registered trademarks of their respective companies.

*MagSafe, MacBook Air, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.

*Nintendo Switch and Nintendo Switch Lite are registered trademarks of Nintendo.

USB Type-C and USB-C* are trademarks of USB Implementers Forum.

Precautions

Regarding pictograms The instructions in this manual and labels on this product use various pictograms to ensure the safe and correct use of this product and to prevent harm to you and other people as well as damage to property. These icons and their definitions are as follows. Please fully understand them before reading the main text.

WARNING Ignoring these precautions may lead to inappropriate handling that may cause death or serious injuries.

CAUTION Ignoring these precautions may lead to inappropriate handling that may cause serious injuries or property damage.

General prohibitions

General precautions

Unplug

Do not touch with wet hands

Do not disassemble

Avoid dust

Be sure to observe the following precautions in order to ensure safe use.

WARNING

- Stop using the product immediately in the cases listed below and consult the store you purchased it from.
A fire or electric shock may result from continued usage.
· Smoke, abnormal odors, or noises are coming from the product.
· The product is wet.
· Foreign materials or liquid has entered the product.
· The cable, power plug, or case has been damaged.
- Do not touch the power plug or cable with wet hands. Doing so may cause a fire or electric shock.
- Do not connect this product to an outlet outside the country where you purchased it. Doing so may cause a fire.
- Firmly push the power plug all the way into a household outlet. A loose connection may cause a contact failure, leading to a fire or electric shock.
- Do not forcibly pull or bend the cable, and do not place any heavy objects on it. Always hold the connector when plugging and unplugging the cable. Failure to do so may cause external cord damage or disconnection, leading to a fire or electric shock.
- Do not use a power strip for power source. Doing so may cause a fire.
- Do not attempt to disassemble or modify the product. Doing so may cause a fire, electric shock or injury.

CAUTION

- Before using this product, check that there is no foreign matter such as dust or liquid in the connectors of the product and the connected device. Especially for a waterproof device, check for remaining water when connecting it after it gets wet. Charging when the connector is wet or has foreign matter in it may cause a fire, electric shock, or malfunction.
- When connecting a device to the product, make sure to follow the precautions for that device.
- Do not use or store the product in the following places. Doing so may cause a fire, electric shock, or malfunction.
· Places exposed to direct sunlight and locations with high temperatures, such as near a space heater.
· Places with high humidity or close to sources of water.
· Places with a lot of dust.
· Places with a lot of vibration.
- Do not use an incompatible charging cable. Doing so may cause a fire, melting, or malfunction.
- The product is not waterproof. Use and store it in places where it is not exposed to water or other liquids. Any liquid such as rain, water spray, juice, coffee, steam, and sweat may cause this product to breakdown.
- If the product is not used for a long period of time, disconnect it from a household outlet. Failure to do so may cause a malfunction.
- Do not drop the product, subject it to strong shocks, or place objects on it.