

How to charge your smartphone, tablet or PC¹

- 1 Connect the charging cable to this product.
- 2 Connect the other end of the charging cable connected with the product or the USB Type-C® connector integrated with the product to your smartphone and so on. If charging does not begin automatically, quickly press the button for approximately 1 second or less to begin charging.
- 3 Once it is charged, for your safety, remove the charging cable by following the procedures in the illustration in the order of ②→①.

 
*When charging a connected device starts, the battery level indicator  turns green.

*The product may not be able to charge up to the indicated capacity number of times if a connected smartphone, tablet, or computer is powered on, or it is in use during charging.

*Not removing the cable will cause the amount of charge in the battery to decrease. Please ensure that the cable is removed when it is not in use.

*1 For charging only one tablet or computer.

*When multiple ports are used simultaneously, charging may not be possible or may take time to complete.

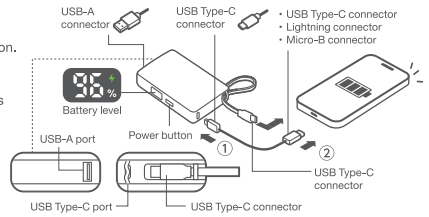

How to charge the power bank

- 1 Connect the charging cable to the USB Type-C port of this product.
- 2 Connect the other end of the charging cable connected with the product or the USB Type-C connector integrated with the product to the AC charging adapter.
- 3 Charging begins once the AC adapter is inserted into a power socket.
- 4 Once it is charged, for your safety, remove the cable by following the procedures in the illustration in the order of ③→②→①.

*When charging a connected device starts, the battery level indicator  turns green.

*Please ensure that the cable is removed after charging.

 
Leaving the cable connected may lead to breakage or damage to the connector.

*When the battery level display reaches 100% or is turned off, the battery is fully charged.

*No AC charging adapter is included. When using the connector integrated with the product, prepare an AC charging adapter with a USB Type-C port.

*Both the USB Type-C connector integrated with the product and the USB Type-C port can be used for charging, but they cannot be used simultaneously.

*2 AC charging adapters of 30 W and above are recommended. Charging with an AC adapter of less than 30 W or a computer may take longer, or may not be possible. Also, when a USB Type-C to USB-A cable is used for charging, the battery may not be fully charged within the time indicated on the package and website.

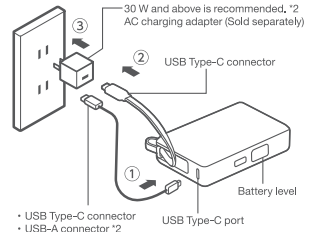


Charging all at once

- 1 Connect the charging cable to the USB Type-C port of this product.
- 2 Connect the other end of the charging cable to a smartphone and so on or an AC charging adapter.
- 3 Connect the USB Type-C connector integrated with the product to the AC adapter or the smartphone and so on.
- 4 Charging begins once the AC adapter is inserted into a power socket.

*If charging does not begin for the connected device such as a smartphone in the charging all at once, quickly press the power button (for approximately 1 second or less).

 *Depending on the device to connect, charging to the product may take priority, which results in charging longer time for the device.

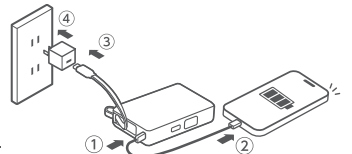


For connection with batteries and devices supporting USB Type-C input and output

Do not connect a battery and device that has a USB Type-C port (supporting input/output) by using a charging cable. Reverse charging may occur.


When using multiple ports and the connector simultaneously

 ■ When using 1 port and the connector

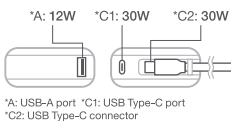

*A: USB-A port *C1: USB Type-C port
*C2: USB Type-C connector

 
■ When using 2 ports and the connector simultaneously

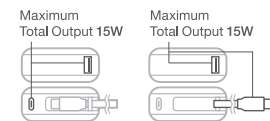

Maximum
Total Output 15W

Maximum
Total Output 15W

 ■ When using 3 ports and the connector simultaneously

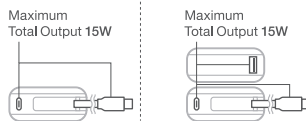

Maximum
Total Output 15W

Maximum
Total Output 15W

How to check the remaining battery and use Low-current mode

Remaining charge Press the power button for a short time. The indicator lights up in 1% increments according to the battery level.

 
Low-current mode Connect a small electronic device such as a Bluetooth® earphone or headset to the USB-A port for use.

☐ ON Press the power button twice in succession. The indicator  flashes green.

☐ OFF Press the power button twice in succession. The battery level indicator is turned off and the low-current mode is cancelled.

*The low-current mode is automatically cancelled after about 2 hours of being activated.

*The low-current mode may not be automatically cancelled even when the connected device to charge is fully charged or no device is connected.

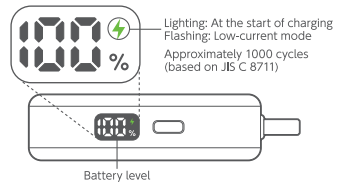

CAUTION

Regarding the built-in battery

*The battery is a consumable that degrades even when used normally. Battery degradation is normal. It is not a malfunction. The batteries cannot be replaced. *When this product is stored without being used for a long period of time, charge it once every 3 to 6 months until the battery level indicator shows approximately 70% to prevent degradation of the battery performance. *In an environment with a lower ambient temperature, the duration for continuous usage will be shortened.

Limitation of Liability

• In no event will ELECOM Co., Ltd be liable for any lost profits or special, consequential, indirect, punitive damages arising out of the use of this product.
• ELECOM Co., Ltd will have no liability for any loss of data, damages, or any other problems that may occur to any devices connected to this product.

Disposal and Recycling

*Do not dispose of this product as household waste. Dispose/recycle of it in accordance with local regulations.
*Bring it to a collection point for batteries in accordance with local regulations.

Precautions

Regarding pictograms The instructions in this manual and labels on this product use various pictograms to ensure the safe and correct use of this product and to prevent harm to you and other people as well as damage to property. These icons and their definitions are as follows. Please fully understand them before reading the main text.



WARNING Ignoring these precautions may lead to inappropriate handling that may cause death or serious injuries.



CAUTION Ignoring these precautions may lead to inappropriate handling that may cause serious injuries or property damage.



General prohibitions



General precautions



Unplug



Do not touch
with wet hands



Do not
disassemble



Avoid dust

Be sure to observe the following precautions in order to ensure safe use.

WARNING



- Stop using the product immediately in the cases listed below and consult the store you purchased it from. A fire or electric shock may result from continued usage.
 - Smoke, abnormal odors, or noises are coming from the product.
 - The product is wet.
 - Foreign materials or liquid has entered the product.
 - The cable, power plug, or case has been damaged.
- Do not touch the power plug or cable with wet hands. Doing so may cause a fire or electric shock.
- Firmly push the power plug all the way into a household outlet. A loose connection may cause a contact failure, leading to a fire or electric shock.



- Do not forcibly pull or bend the cable, and do not place any heavy objects on it. Always hold the connector when plugging and unplugging the cable. Failure to do so may cause external cord damage or disconnection, leading to a fire or electric shock.
- Do not use a power strip for power source. Doing so may cause a fire.
- Do not attempt to disassemble or modify the product. Doing so may cause a fire, electric shock or injury.
- Do not put this product in fire. This may cause an explosion or breakage.



CAUTION



- Before using this product, check that there is no foreign matter such as dust or liquid in the connectors of the product and the connected device. Especially for a waterproof device, check for remaining water when connecting it after it gets wet. Charging when the connector is wet or has foreign matter in it may cause a fire, electric shock, or malfunction.
- When connecting a device to the product, make sure to follow the precautions for that device.
- Do not use or store the product in the following places. Doing so may cause a fire, electric shock, or malfunction.
 - Places exposed to direct sunlight and locations with high temperatures, such as near a space heater.
 - Places with high humidity or close to sources of water.
 - Places with a lot of dust.
 - Places with a lot of vibration.
- Do not use an incompatible charging cable. Doing so may cause a fire, melting, or malfunction.
- Do not use or store near dusty places, such as bedding. Doing so may cause a fire or malfunction.



Compliance Status www.elecom.co.jp/global/certification/

Model: DE-A06-10000BK

Model: DE-A06-10000WH



Global Support



A customer who purchases outside Japan should contact the local retailer in the country of purchase for inquiries. In "ELECOM CO., LTD. (Japan)", no customer support is available for inquiries about purchases or usage in/from any countries other than Japan. Also, no language other than Japanese is available. Replacements will be made under stipulation of the Elecom warranty.
<https://www.elecom.co.jp/r/s536>

ELECOM CO., LTD.

Fushimimachi 4-1-1, Chuo-ku, Osaka City
www.elecom.co.jp/global/

- The actual output value may vary depending on conditions such as the connected device and its OS version. In certain cases, the charging time may be longer or the device may not charge.
- The images are for illustration purposes only and may differ from your actual product.
- In order to make improvements to this product and for improved safety, the colors and specifications are subject to change without prior notice.
- The company and product names on the packaging and the manual are, in general, trademarks or registered trademarks of their respective companies.
- iPhone, iPad, Lightning are trademarks of Apple Inc., registered in the U.S. and other countries and regions.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ELECOM CO., LTD. is under license.
- Nintendo Switch and Nintendo Switch Lite are registered trademarks of Nintendo.
- USB Type-C® and USB-C® are trademarks of USB Implementers Forum.

Power Bank

Manual, Safety precautions and Compliance with regulations, 1st edition, March, 2026