


How to connect

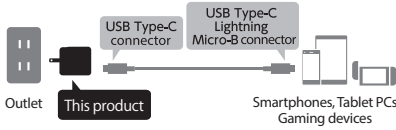

* Please separately prepare a cable to connect this device to your device.
 * Maximum charging output may not be possible depending on specifications of the connected device and cable.
 * Cannot be used with the NINTENDO SWITCH™ on the dock.

Product specifications

- Port shape: USB Type-C port x 1
- Dimensions: Approx.Width2.0"×Thickness1.1"×Height1.8"
- Rated input: AC100-240V 50/60Hz
- Rated output: 5V/3A, 9V/2.22A
- Operating temperature range: 32° F to 104° F

Precautions on use

Regarding pictograms

The instructions in this manual and labels on this product use various pictograms to ensure the safe and correct use of this product and to prevent harm to you and other people as well as damage to property. These icons and their definitions are as follows. Please fully understand this before reading the main text.

	WARNING	Ignoring these precautions may lead to erroneous handling that may cause death or serious injuries.
	CAUTION	Ignoring these precautions may lead to erroneous handling that may cause serious injuries or damages.

Be sure to observe the following precautions in order to ensure safe and correct use.

WARNING

- Stop using the product immediately when smoke, abnormal odours or noises are coming from the product; when it is wet; when foreign matters or a liquid enters the product; when the cable, adapter, or case is damaged, and consult the store you purchased the product from. Doing otherwise may cause fire and electric shock.
- Do not touch the power plug or cable with wet hands. Doing so can cause a fire or electric shock.
- Firmly push the power plug all the way into a household outlet. A loose connection may result a fire or an electric shock.
- Do not forcibly pull or bend the cable, and do not place any heavy objects on it. Always hold the connector when plugging and unplugging the cable. It can cause armored cord damage, disconnection, and lead to a fire or electric shock.
- Do not overload outlets. Doing so can cause a fire.
- Do not attempt to disassemble or modify the product. Fire, electric shock or injuries may result.

CAUTION

- Before using this product, check that there is no dust or liquid in the connectors of this device or the device to be connected. Check for the presence of water, especially if the connected waterproof device is wet. Charging when the connector is wet or has foreign matter in it may cause fires, electric shocks, or malfunctions.
- When connecting a device to the product, make sure to follow the precautions for that device.
- Do not use or store the product in the following places. Fire, electric shock or malfunctions may result.
 - In direct sunlight • In areas of high temperature such as in proximity to heating devices • In areas of high humidity • In wet or damp places
 - In dusty environments • In places with high levels of vibration
- Do not use this device with incompatible charging cables. It will cause fire, melting, or malfunctions.
- This product is not waterproof. Please do not use nor store it in a wet environment. Rain, water spray, juice, coffee, steam, sweat and other liquids may cause a breakdown.
- If the product is not used for a long period of time, disconnect the product from the household outlet. Malfunctions may occur otherwise.
- Do not drop the product, nor subject it to strong physical shocks. Do not place objects on it.

FCC Statement

FC This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In order to make improvements to this product, the design and specifications are subject to change without prior notice.

Responsible party
 ELECOM USA, Inc.
 4041 MacArthur Blvd Suite 400, Newport Beach, CA 92660 USA
 elecomusa.com

Compliance Status
www.elecom.co.jp/global/certification/