

Model: TK-FBP102

ENGLISH


Manual

Wireless Keyboard

Name and function of each part

- [Fn]** key
Hold [Fn] and press another key with an icon of the same colour to perform the function.
- Pairing key**
Hold [Fn] and press and hold [**Shift**] simultaneously for 3 to 4 seconds to enter pairing mode.
- Hotkey lock**
Lock or unlock the keys listed in **5**.
Other [Fn] key combinations will not be locked.
When locked, you can't use the corresponding function without pressing [Fn].
- Home**
On Windows, macOS, Chrome OS: Shows the homepage of the Web browser.
On iOS/PadOS, Android: Shows your home screen.

각 부분별 명칭 및 기능

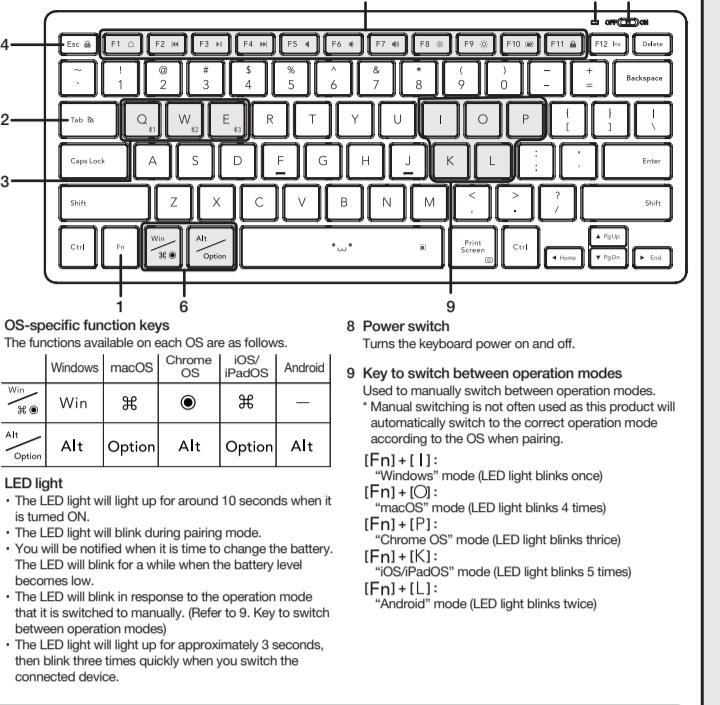


- Hotkeys**
You can perform operations such as adjusting the system's volume or playing music by holding the [Fn] key and pressing the corresponding key simultaneously.
The function may not operate or perform differently depending on the environment.

- Home**
Shows the homepage of the Web browser.
- Pair**
Skips to the previous track when playing music.
- Play/pause**
Plays media, such as music. Pressing it while the media is playing will pause it. When app is active.
- Next track**
Skips to the next track when playing music.
- Screen lock**
Locks the screen.
- Mute**
Mutes audio output for the entire system. Audio unmutes when it is pressed again.


Connecting and Setting up the Keyboard

1 Inserting the batteries

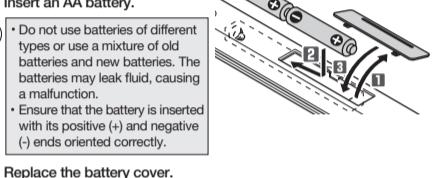

- Remove the battery cover.
- Insert an AA battery.
- Do not mix different types of batteries or mix old batteries and new batteries. The batteries may leak fluid, causing a malfunction.
- Ensure that the battery is inserted with its positive (+) and negative (-) ends oriented correctly.

2 Powering ON

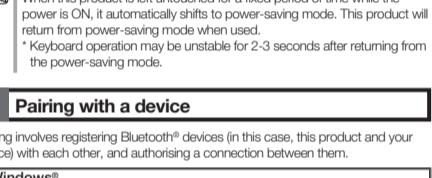

- Slide the power switch to ON. The LED light will turn up for about 10 seconds.
- The LED light will blink for a while if the battery level is low.

3 Pairing with a device

- Pairing mode requires Bluetooth® devices in this case, this product and your device with each other, and authorizing a connection between them.

Windows®

- Right click on "Start" on the bottom of the screen and then click "Settings".
- Click on "Bluetooth & devices".
- Click on "Add devices".

4 Hold down the [Fn] key and press [**Shift**], [**Ctrl**], or [**Alt**] to select a device to be connected.

- [**Shift**] is selected by default.
- You can register up to 3 Bluetooth® devices.

5 Press and hold the [Fn] key and [**Shift**] simultaneously for 3-4 seconds.

- Pairing mode is activated, and the LED light blinks slowly.

6 Click on "Bluetooth".

- Pairing begins.

7 When the message changes to "Your device is ready to go!", click "Done".

- When pairing is complete, the LED light will blink quickly then stop.

8 Pairing is complete when this product is added to "Bluetooth & devices" and the status is "Connected".

- You can now use the product.

9 When the input is different from what is printed on the key...

- Try changing the operation mode manually if the input is different from what is printed on the key.

Manually switch to "Windows" mode:

- [Fn] + [**I**] + [**L**] + (LED light blinks once)

10 When the input is different from what is printed on the key...

- Try changing the operation mode manually if the input is different from what is printed on the key.

Manually switch to "Windows" mode:

- [Fn] + [**I**] + [**L**] + (LED light blinks once)

- Do not use water or metal chips on the keyboard. Stop using immediately and remove the batteries from the keyboard.
- If the product is functioning abnormally, such as heating up, generating smoke, or emitting a strange smell, stop using it immediately and don't connect it to a PC. If the product is connected to a PC, disconnect it and don't cause burns, remove the batteries from the keyboard. Afterwards, please contact your dealer. Continuing to use the product as it is may cause a fire or electric shock.
- Do not drop or hit the product.
- Do not attempt to disassemble, modify or repair this product. Doing so may cause a fire, electric shock, or product damage. Malfunctioning is not covered under warranty.
- Do not attempt to use this product in a fire, as the product may burst, resulting in fire or injury. Breakage may cause fire or injury.

- Do not use this product in any of the following environments: - In a place where there is a risk of explosion or fire. - In a place that becomes hot, such as around an heater.
- In a moist place or a place where condensation may occur.
- In an unclean place or a place exposed to vibration.
- In a place where a magnetic field is generated (such as near a magnet).

- This product does not have a waterproof structure. Use or store in a place not exposed to liquids such as water.

- Any liquid such as rain, water spray, juice, coffee, steam, and sweat, may cause this product to break down.

- Do not use this product for any other purpose except as a PC keyboard.

- Do not use this product with any device that may significantly be affected in the case of this product malfunction.

- When you wish to dispose of this product, be sure do so in accordance with the local ordinances and laws of your area.

Batteries

- Please use either AAA alkaline batteries, AAA manganese batteries or AAA nickel-metal hydride rechargeable batteries.

- When not using this product for long periods of time, remove the batteries. This may cause fluid leak or malfunction.

- Only the original equipment manufacturer (OEM) of this product can guarantee the product.

- Product specifications

Safety prection

- Prohibited action

- Mandatory action

- Situation that needs attention

WARNING

- If a foreign object (for example water or metal chips) enters the keyboard, stop using immediately and remove the batteries from the keyboard.

- Continuing to use the product as it is may cause a fire or electric shock.

- Using a volatile liquid (such as paint thinner, benzene or alcohol) may affect the material quality and/or discolor this product.

Cautions for Wireless Equipment

- This product is a wireless device that can use the entire 2.4 GHz band, and is compliant with the FCC regulations. The GFSK method is adopted as the product's wave method, and the transmission distance is 10 m.

- Before using this product, check that there are no other "radio stations" operating nearby.

- Move this product to another location or stop using it immediately and remove the batteries from the keyboard. Afterwards, please contact your dealer. Continuing to use the product as it is may cause a fire or electric shock.

- Do not attempt to disassemble, modify or repair this product.

- Doing so may cause a fire, electric shock, or product damage. Malfunctioning is not covered under warranty.

- Do not attempt to use this product in a fire, as the product may burst, resulting in fire or injury. Breakage may cause fire or injury.

CAUTION

- Do not place this product in any of the following environments:

- In a place that becomes hot, such as around an heater.

- In a moist place or a place where condensation may occur.

- In an unclean place or a place exposed to vibration.

- In a place where a magnetic field is generated (such as near a magnet).

- This product does not have a waterproof structure. Use or store in a place not exposed to liquids such as water.

- Any liquid such as rain, water spray, juice, coffee, steam, and sweat, may cause this product to break down.

- Do not use this product for any other purpose except as a PC keyboard.

- Do not use this product with any device that may significantly be affected in the case of this product malfunction.

- When you wish to dispose of this product, be sure do so in accordance with the local ordinances and laws of your area.

Limitation of Liability

- In no event will ECOM Co., Ltd be liable for any lost profits or special, consequential, indirect, punitive damages arising out of the use of this product.

- ECOM Co., Ltd will have no liability for any loss of data, damages, or other problems that may occur to any devices connected to this product.

Batteries

- Please use either AAA alkaline batteries, AAA manganese batteries or AAA nickel-metal hydride rechargeable batteries.

- When not using this product for long periods of time, remove the batteries. This may cause fluid leak or malfunction.

Product specifications

Safety prection

WARNING

- If a foreign object (for example water or metal chips) enters the keyboard, stop using immediately and remove the batteries from the keyboard.

- Continuing to use the product as it is may cause a fire or electric shock.

- Using a volatile liquid (such as paint thinner, benzene or alcohol) may affect the material quality and/or discolor this product.

Cautions for Wireless Equipment

- This product is a wireless device that can use the entire 2.4 GHz band, and is compliant with the FCC regulations. The GFSK method is adopted as the product's wave method, and the transmission distance is 10 m.

- Before using this product, check that there are no other "radio stations" operating nearby.

- Move this product to another location or stop using it immediately and remove the batteries from the keyboard. Afterwards, please contact your dealer. Continuing to use the product as it is may cause a fire or electric shock.

- Do not attempt to disassemble, modify or repair this product.

- Doing so may cause a fire, electric shock, or product damage. Malfunctioning is not covered under warranty.

- Do not attempt to use this product in a fire, as the product may burst, resulting in fire or injury. Breakage may cause fire or injury.

CAUTION

- Do not place this product in any of the following environments:

- In a place that becomes hot, such as around an heater.

- In a moist place or a place where condensation may occur.

- In an unclean place or a place exposed to vibration.

- In a place where a magnetic field is generated (such as near a magnet).

- This product does not have a waterproof structure. Use or store in a place not exposed to liquids such as water.

- Any liquid such as rain, water spray, juice, coffee, steam, and sweat, may cause this product to break down.

- Do not use this product for any other purpose except as a PC keyboard.

- Do not use this product with any device that may significantly be affected in the case of this product malfunction.

- When you wish to dispose of this product, be sure do so in accordance with the local ordinances and laws of your area.

Batteries

- Please use either AAA alkaline batteries, AAA manganese batteries or AAA nickel-metal hydride rechargeable batteries.

- When not using this product for long periods of time, remove the batteries. This may cause fluid leak or malfunction.

Product specifications

Safety prection

WARNING

- If a foreign object (for example water or metal chips) enters the keyboard, stop using immediately and remove the batteries from the keyboard.

- Continuing to use the product as it is may cause a fire or electric shock.

- Using a volatile liquid (such as paint thinner, benzene or alcohol) may affect the material quality and/or discolor this product.

Cautions for Wireless Equipment

- This product is a wireless device that can use the entire 2.4 GHz band, and is compliant with the FCC regulations. The GFSK method is adopted as the product's wave method, and the transmission distance is 10 m.

- Before using this product, check that there are no other "radio stations" operating nearby.

- Move this product to another location or stop using it immediately and remove the batteries from the keyboard. Afterwards, please contact your dealer. Continuing to use the product as it is may cause a fire or electric shock.

- Do not attempt to disassemble, modify or repair this product.

- Doing so may cause a fire, electric shock, or product damage. Malfunctioning is not covered under warranty.

- Do not attempt to use this product in a fire, as the product may burst, resulting in fire or injury. Breakage may cause fire or injury.

CAUTION

- Do not place this product in any of the following environments:

- In a place that becomes hot, such as around an heater.

- In a moist place or a place where condensation may occur.

- In an unclean place or a place exposed to vibration.

- In a place where a magnetic field is generated (such as near a magnet).

- This product does not have a waterproof structure. Use or store in a place not exposed to liquids such as water.

- Any liquid such as rain, water spray, juice, coffee, steam, and sweat, may cause this product to break down.

- Do not use this product for any other purpose except as a PC keyboard.


- Do not use this product with any device that may significantly be affected in the case of this product malfunction.

- When you wish to dispose of this product, be sure do so in accordance with the local ordinances and laws of your area.

Batteries

- Please use either AAA alkaline batteries, AAA manganese batteries or AAA nickel-metal hydride rechargeable batteries.

- When not using this product for long periods of time, remove the batteries. This may cause fluid leak or malfunction.

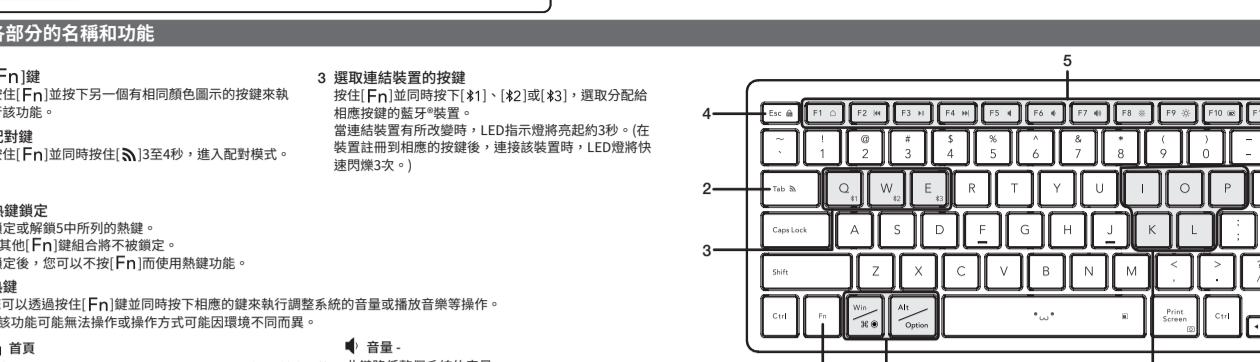

各部分的名稱和功能

- 1 [Fn] 鍵**
按住[Fn]並按下另一個有相同顏色圖示的按鍵來執行該功能。
- 2 配對鍵**
按住[Fn]並同時按住[§]至4秒，進入配對模式。
- 4 熱鍵鎖定**
鎖定F1-F12鍵所列的熱鍵。
其他[Fn]組合將不被鎖定。
您可以使用[Fn]來使用熱鍵功能。
- 5 熱鍵**
您可以透過按住[Fn]鍵並同時按相應的鍵來執行調整系統的音量或播放音樂等操作。
該功能可能無法操作或操作方式可能因環境不同而異。

- △ 首頁**
在Windows, macOS, Chrome OS上：顯示網頁瀏覽器的首頁。
- 音量 -**
在Windows, macOS, Chrome OS上：降低整個系統的音量。
- 音量 +**
在Windows, macOS, Chrome OS上：顯示您的主畫面。
- 上一曲**
在播放音樂時，此鍵會跳到上一曲目。
- 當前應用程式於活動狀態時**
- II 播放/暫停**
此鍵是用於播放音樂，如音樂。在媒體播放時，按下此鍵，即可停止播放。當應用程式處於活動狀態時。
- 下一曲**
播放音樂時，此鍵會跳到下一曲目。
- 當應用程式處於活動狀態時**
- 靜音**
此鍵可使整個系統的音訊輸出靜音。
- 當再次按下該鍵時，音訊將取消靜音。**

- III 撥放/暫停**
此鍵是用於播放媒體，如音樂。在媒體播放時，按下此鍵，即可停止播放。當應用程式處於活動狀態時。
- IV 下一曲**
播放音樂時，此鍵會跳到下一曲目。
- 當應用程式處於活動狀態時**
- 音量 -**
在Windows, macOS, Chrome OS上：顯示網頁瀏覽器的首頁。
- 音量 +**
在Windows, macOS, Chrome OS上：降低整個系統的音量。
- 上一曲**
在播放音樂時，此鍵會跳到上一曲目。
- 當應用程式處於活動狀態時**
- II 播放/暫停**
此鍵是用於播放媒體，如音樂。在媒體播放時，按下此鍵，即可停止播放。當應用程式處於活動狀態時。
- 下一曲**
播放音樂時，此鍵會跳到下一曲目。
- 當應用程式處於活動狀態時**
- 靜音**
此鍵可使整個系統的音訊輸出靜音。
- 當再次按下該鍵時，音訊將取消靜音。**

- △ 開設電源**

- 1 放入電池**

- 2 放入一顆AA電池。**

- 3 重新蓋回電池蓋。**

- 2 開啟電源**

- 1 將電源開關滑到ON。**

- LED指示燈將亮起約10秒。**

- 如果電池電量不足，LED指示燈將閃爍一段時間。**

- 從省電模式**

- 在某些情況下，若本公司在固有的時間內未被觸控，將自動進入省電模式。本產品在使用時將從省電模式更回正常模式。**

- 從省電模式返回正常模式後，鍵盤操作可能會出現2-3秒不響應的情況。**

- 3 與裝置對接**

- 附註和以下兩組裝置（在此情況下，本產品和您的裝置），並授權其在連接埠上連接。**

- Windows**

- 以下說明適用於Windows®11(21H2)。**

- 1 右側點擊幕底端的「開始」，然後點擊「設定」。**

- 2 點擊「藍牙與裝置」。**

- 3 點擊「新增裝置」。**

- 4 按住[Fn]並按下[§]、[§]或[§]來選取一個連結裝置。**

- 預設狀態下，其將選取[§]。**

- 您最多可註冊3組藍牙裝置。**

- 5 同時按住[Fn]鍵和[§]達3-4秒。**

- 配對模式將啟動，且LED指示燈將緩慢閃爍。**

- 6 選取「ELECOM BT Keyboard」並點擊「連線」。**

- 7 當「ELECOM BT Keyboard」的狀態變為「已連接」時，配對即告完成。**

- 8 當顯示「您的裝置已就緒！」時，點擊「完成」。**

- 9 當產品新增「藍牙與裝置」，且狀態為「已連接」時，配對即宣告完成。**

- 您現在可以使用該產品了。**

- 當輸入的內容與按鍵所示之內容不同時...
如果輸入的內容與按鍵所示之內容不同，請嘗試以手動方式來變更操作模式。**

- 當**