


## How to charge your smartphone, tablet or PC\*1

- 1 Connect the charging cable to this product.
- 2 Connect the other end of the charging cable connected with the product or the USB Type-C® connector integrated with the product to your smartphone and so on. If charging does not begin automatically, quickly press the button for approximately 1 second or less to begin charging.
- 3 Once it is charged, for your safety, remove the charging cable by following the procedures in the illustration in the order of ②→①.

\*When charging a connected device starts, the battery level indicator  turns green.


\*The product may not be able to charge up to the indicated capacity/number of times if a connected smartphone, tablet, or computer is powered on, or it is in use during charging.

\*Not removing the cable will cause the amount of charge in the battery to decrease.

\*Please ensure that the cable is removed when it is not in use.


\*1 For charging only one tablet or computer.

\*When multiple ports are used simultaneously, charging may not be possible or may take time to complete.

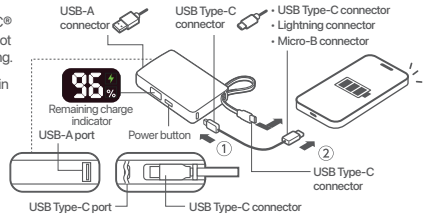

## How to charge the power bank

- 1 Connect the charging cable to the USB Type-C port of this product.
- 2 Connect the other end of the charging cable connected with the product or the USB Type-C connector integrated with the product to the AC charging adapter.
- 3 Charging begins once the AC adapter is inserted into a power socket.
- 4 Once it is charged, for your safety, remove the cable by following the procedures in the illustration in the order of ③→②→①.

\*When charging a connected device starts, the battery level indicator  turns green.

\*Please ensure that the cable is removed after charging.


\*Leaving the cable attached may lead to breakage or damage to the connector.

\*When the battery level display reaches 100% or is turned off, the battery is fully charged.

\*No AC charging adapter is included. When using the connector integrated with the product, prepare an AC charging adapter with a USB Type-C port.

\*Both the USB Type-C connector integrated with the product and the USB Type-C port can be used for charging, but they cannot be used simultaneously.

\*2 AC charging adapters of 30 W and above are recommended. Charging with an AC adapter of less than 30 W or a computer may take longer, or may not be possible. Also, when a USB Type-C to USB-A cable is used for charging, the battery may not be fully charged within the time indicated on the package and HP.

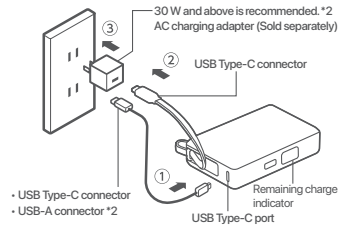


## Charging all at once

- 1 Connect the charging cable to the USB Type-C port of this product.
- 2 Connect the other end of the charging cable to a smartphone and so on or an AC charging adapter.
- 3 Connect the USB Type-C connector integrated with the product to the AC adapter or the smartphone and so on.
- 4 Charging begins once the AC adapter is inserted into a power socket.

\*If charging does not begin for the connected device such as a smartphone in the charging all at once, quickly press the power button (for approximately 1 second or less).

\*Depending on the device to connect, charging to the product may take priority, which results in charging longer time for the device.

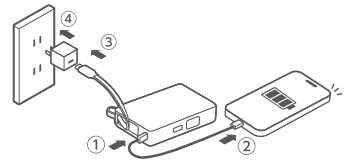


## For connection with batteries and devices supporting USB Type-C input and output

Do not connect a battery and device that has a USB Type-C port (supporting input/output) by using a charging cable. Reverse charging may occur.


## When using multiple ports and the connector simultaneously

■ When using 1 port and the connector

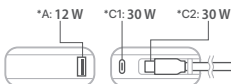


\*A: USB-A port \*C1: USB Type-C port  
\*C2: USB Type-C connector

 ■ When using 2 ports and the connector simultaneously




■ When using 3 ports and the connector simultaneously

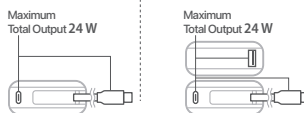

## How to check the remaining charge and use trickle charging mode

**Remaining charge check** Press the power button for a short time. The indicator lights up in 1% increments according to the battery level.


**Trickle charging mode** Connect a small electronic device such as a Bluetooth® earphone or headset to the USB-A port for use.

**ON** Press the power button twice in succession. The indicator  flashes green.

**OFF** Press the power button twice in succession.  
The remaining charge indicator is turned off and the trickle charging mode is cancelled.

\*The trickle charging mode is automatically cancelled after about 2 hours of being activated.

\*The trickle charging mode may not be automatically cancelled even when the connected device to charge is fully charged or no device is connected.

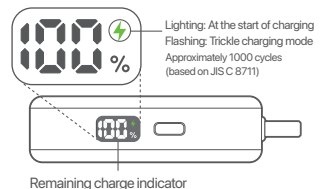

Lighting: At the start of charging  
Flashing: Trickle charging mode  
Approximately 1000 cycles  
(based on JIS C 8711)

Remaining charge indicator