

デジタルカメラケース対応表

弊社デジタルカメラケースに収納可能なデジタルカメラを○×で記載しています。

- : 収納できます
- ×: 収納できません
- △: 付属ストラップの使用はできません

ELECOM製品

メーカー	シリーズ	型番	DGB-CP01L	DGB-CP01M	DGB-CPW01L	DGB-CPW01M	DGB-046	DGB-056	ZSB-SDG011	DGB-057	DGB-061	DGB-064	DGB-062	DGB-063	DGB-065	DGB-066	ZSB-DG013	ZSB-DG014	ZSB-DG015
Canon																			
Canon	IXY	IXY 200	○	○	○	○	○	○	○	○	○	○	△	○	○	○	○	○	○
Canon	IXY	IXY 210	○	○	○	○	○	○	○	○	○	○	△	○	○	○	○	○	○
Canon	IXY	IXY 650	○	○	○	○	○	○	○	○	○	○	△	○	○	○	○	○	○
Canon	PowerShot	G1 X Mark III	×	×	×	×	×	×	○	×	×	×	×	×	×	○	×	×	×
Canon	PowerShot	G3 X	×	×	×	×	×	×	○	×	×	×	×	×	×	×	×	×	×
Canon	PowerShot	G5 X	×	×	×	×	×	×	○	×	×	×	×	×	×	○	×	×	×
Canon	PowerShot	G5 X Mark II	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
Canon	PowerShot	G7 X Mark II	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
Canon	PowerShot	G7 X Mark III	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
Canon	PowerShot	G9 X Mark II	○	○	○	○	×	○	○	○	○	○	○	×	×	○	○	○	×
Canon	PowerShot	SX430 IS	×	×	×	×	×	×	○	×	×	×	×	×	×	×	×	×	×
Canon	PowerShot	SX620 HS	○	○	○	○	×	○	○	○	○	○	△	×	×	○	○	○	×
Canon	PowerShot	SX70 HS	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Canon	PowerShot	SX720 HS	○	○	○	○	×	×	○	×	○	×	×	×	×	○	○	×	×
Canon	PowerShot	SX740 HS	○	○	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
FUJIFILM																			
FUJIFILM	FinePix	XP140	○	○	○	○	×	×	○	×	○	×	×	×	×	○	○	×	×
FUJIFILM	X コンパクト	X100F	×	×	×	×	×	×	×	×	○	×	×	×	×	○	○	×	×
FUJIFILM	X コンパクト	X100V	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×	×	×
Nikon																			
Nikon	COOLPIX	A1000	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
Nikon	COOLPIX	B600	×	×	×	×	×	×	○	×	×	×	×	×	×	×	×	×	×
Nikon	COOLPIX	P1000	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Nikon	COOLPIX	P950	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Nikon	COOLPIX	W150	○	○	○	○	×	×	○	×	○	×	×	×	×	○	○	×	×
Nikon	COOLPIX	W300	○	○	○	○	×	×	○	×	○	○	○	×	×	○	○	○	×
OLYMPUS																			
OLYMPUS	Tough	TG-6	○	○	○	○	×	×	○	×	○	○	△	×	×	○	○	○	×
OLYMPUS	Tough	TG-6 工一郎	○	○	○	○	×	×	○	×	○	○	△	×	×	○	○	○	×
Panasonic																			
Panasonic	LUMIX	DC-FZ1000M2	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Panasonic	LUMIX	DC-FZ85	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Panasonic	LUMIX	DC-LX100M2	×	×	×	×	×	×	○	×	×	×	×	×	×	×	×	×	×

デジタルカメラケース対応表

弊社デジタルカメラケースに収納可能なデジタルカメラを○×で記載しています。

- : 収納できます
- ×: 収納できません
- △: 付属ストラップの使用はできません

ELECOM製品

メーカー	シリーズ	型番	DGB-CP01L	DGB-CP01M	DGB-CPW01L	DGB-CPW01M	DGB-046	DGB-056	ZSB-SDG011	DGB-057	DGB-061	DGB-064	DGB-062	DGB-063	DGB-065	DGB-066	ZSB-DG013	ZSB-DG014	ZSB-DG015
Panasonic	LUMIX	DC-TX2	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
Panasonic	LUMIX	DC-TZ95	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
Panasonic	LUMIX	DMC-CM1	○	○	○	○	×	×	×	×	×	×	×	×	×	○	×	×	×
Panasonic	LUMIX	DMC-CM10	○	○	○	○	×	×	×	×	×	×	×	×	×	○	×	×	×
Panasonic	LUMIX	DMC-FZ300	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Panasonic	LUMIX	DMC-FZH1	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Panasonic	LUMIX	DMC-SZ10	○	○	○	○	×	○	○	○	○	○	△	○	○	○	○	○	○
Panasonic	LUMIX	DMC-TX1	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
Panasonic	LUMIX	DMC-TZ57	○	○	○	○	×	×	○	×	○	○	△	×	×	○	○	○	×
Panasonic	LUMIX	DMC-TZ70	○	○	○	○	×	×	○	×	○	○	△	×	×	○	○	○	×
Panasonic	LUMIX	DMC-XL9	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
RICOH																			
RICOH	G	G900	○	○	○	○	×	×	○	×	○	×	×	×	×	○	○	×	×
RICOH	G	G900SE	○	○	○	○	×	×	○	×	○	×	×	×	×	○	○	×	×
RICOH	GR	GR II	○	○	○	○	×	×	○	×	○	×	×	×	×	○	○	×	×
RICOH	GR	GR III	○	○	○	○	×	×	○	×	○	○	△	×	×	○	○	○	×
RICOH	GR	GR IIix	○	○	○	○	×	×	○	×	○	○	△	×	×	○	○	○	×
RICOH	WG	WG-50W	○	○	○	○	×	×	○	×	○	×	×	×	×	○	○	×	×
RICOH	WG	WG-6	○	○	○	○	×	×	○	×	○	×	×	×	×	○	○	×	×
RICOH	WG	WG-60	○	○	○	○	×	×	○	×	○	×	×	×	×	○	○	×	×
RICOH	WG	WG-70	○	○	○	○	×	×	○	×	○	×	×	×	×	○	○	×	×
SIGMA																			
SIGMA	DPO	DPO Quattro	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
SONY																			
SONY	Cyber-shot	DSC-HX90V	○	○	○	○	×	×	○	×	○	○	△	×	×	○	○	○	×
SONY	Cyber-shot	DSC-HX99	○	○	○	○	×	×	○	×	○	○	×	×	×	○	○	○	×
SONY	Cyber-shot	DSC-RX100M4	×	×	×	×	×	×	○	×	○	○	△	×	×	○	○	○	×
SONY	Cyber-shot	DSC-RX100M5A	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
SONY	Cyber-shot	DSC-RX100M6	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×
SONY	Cyber-shot	DSC-RX10M2	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
SONY	Cyber-shot	DSC-RX10M3	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
SONY	Cyber-shot	DSC-RX10M4	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
SONY	Cyber-shot	DSC-RX1RM2	×	×	×	×	×	×	○	×	×	×	×	×	×	×	×	×	×
SONY	Cyber-shot	DSC-WX350	○	○	○	○	×	○	○	○	○	○	×	○	○	○	○	○	○
SONY	Cyber-shot	DSC-WX500	○	○	○	○	×	×	○	×	○	○	△	○	○	○	○	○	×
SONY	Cyber-shot	DSC-WX700	○	○	○	○	×	×	○	×	○	○	×	×	×	○	○	○	×

デジタルカメラケース対応表

弊社デジタルカメラケースに収納可能なデジタルカメラを○×で記載しています。

- : 収納できます
- ×: 収納できません
- △: 付属ストラップの使用はできません

ELECOM製品

メーカー	シリーズ	型番	DGB-CP01L	DGB-CP01M	DGB-CPW01L	DGB-CPW01M	DGB-046	DGB-056	ZSB-SDG011	DGB-057	DGB-061	DGB-064	DGB-062	DGB-063	DGB-065	DGB-066	ZSB-DG013	ZSB-DG014	ZSB-DG015
SONY	Cyber-shot	DSC-WX800	○	○	○	○	×	×	○	×	○	○	×	×	×	○	○	○	×
SONY	VLOGCAM	ZV-1	×	×	×	×	×	×	○	×	○	×	×	×	×	○	○	×	×