

- (2) Insert the 3 included size AAA batteries 3 Attach the battery cover.
- Placing the analyser

Place the analyser on a hard flat surface, such as a wooden floor. Do not place the analyser on any of the following surfaces. Doing so may cause errors in the

- measurement values. Sloped floor
- Soft surface, such as a rug

Measuring the weight of a baby or pet

Displays the difference in weight between the 1st and 2nd measurements to measure the weight of a baby or pet. For the measurement method, see page 7.

side.

arrow, and then remove it.

after checking the polarity (\oplus / \ominus) . The

side with the spring is the negative (\bigcirc)

Measuring only your weight

Measures only your weight. For the measurement method, see page 7.

Measure after automatic recognition of the user

The power is switched on and measurement is started by simply stepping on the analyser. In addition, the user is recognized automatically from the registered users, and the measurement results are recorded. (Limited to when the user number has been specified and measurement has been performed at least once in the past.)





Measure after specifying the user number

Specify the number of a registered user, and then measure. The user is matched reliably with their registered data (more so than with automatic user recognition), and then the measurement results are displayed. For the user registration and measurement methods, see pages 5 to 8.

Measure using Guest mode

An unregistered user can be measured. The measurement values cannot be recorded. For the measurement method, see page 6.

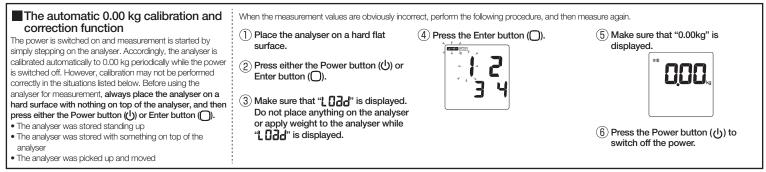

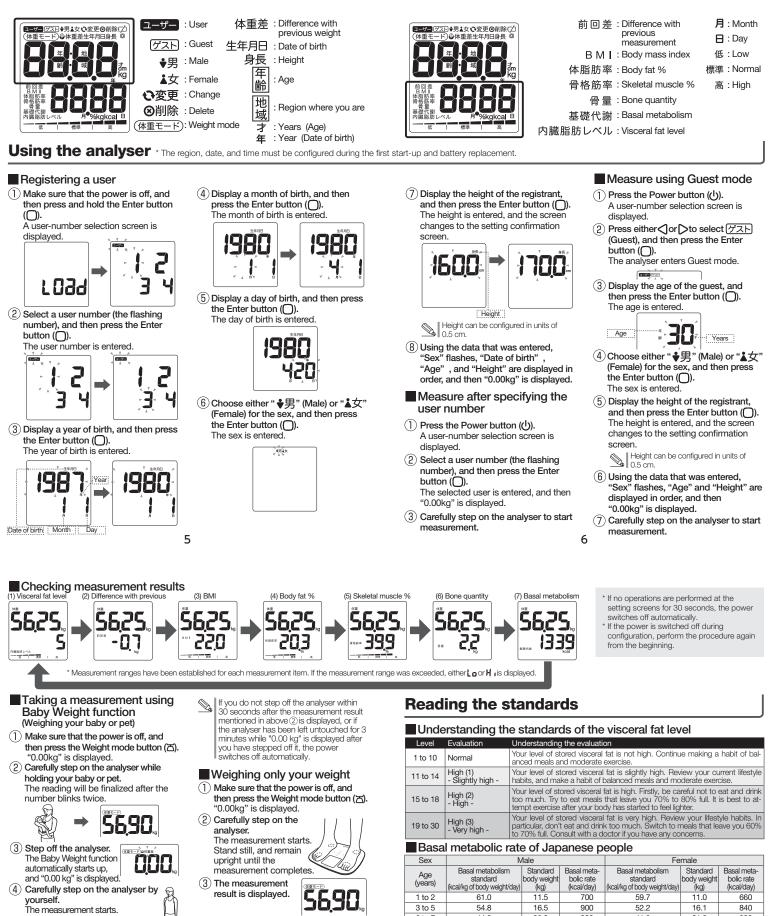

The measurement result will continue to be displayed while you stand on the analyser. The power will turn OFF automatically after 30 seconds have passed.

• When you step off the analyser, the Baby Weight function automatically starts up, and "0.00 kg" is displayed.

When you measure in the Weight mode, the analyser does not measure your body composition, such as visceral fall level or body fat percentage. If you want to measure your body composition, register your information before measurement, or measure in the Guest mode.

| Sex | Male | | | Female | | |
|----------------|--|---------------------------------|---|--|---------------------------------|---|
| Age (years) | Basal metabolism standard (kcal/kg of body weight/day) | Standard body weight (kg) | Basal meta- bolic rate (kcal/day) | Basal metabolism standard (kcal/kg of body weight/day) | Standard body weight (kg) | Basal meta- bolic rate (kcal/day) |
| 1 to 2 | 61.0 | 11.5 | 700 | 59.7 | 11.0 | 660 |
| 3 to 5 | 54.8 | 16.5 | 900 | 52.2 | 16.1 | 840 |
| 6 to 7 | 44.3 | 22.2 | 980 | 41.9 | 21.9 | 920 |
| 8 to 9 | 40.8 | 28.0 | 1,140 | 38.3 | 27.4 | 1,050 |
| 10 to 11 | 37.4 | 35.6 | 1,330 | 34.8 | 36.3 | 1,260 |
| 12 to 14 | 31.0 | 49.0 | 1,520 | 29.6 | 47.5 | 1,410 |
| 15 to 17 | 27.0 | 59.7 | 1,610 | 25.3 | 51.9 | 1,310 |
| 18 to 29 | 24.0 | 63.2 | 1,520 | 22.1 | 50.0 | 1,110 |
| 30 to 49 | 22.3 | 68.5 | 1,530 | 21.7 | 53.1 | 1,150 |
| 50 to 69 | 21.5 | 65.2 | 1,400 | 20.7 | 53.0 | 1,100 |
| 70 or older | 21.5 | 60.0 | 1,290 | 20.7 | 49.5 | 1,020 |

From Dietary Reference Intake (2015 edition) by the Ministry of Health, Labour, and Welfare

A customer who purchases outside Japan should contact the local retailer in the country of purchase for enquiries. In "ELECOM CO, LTD. (Japan)", no customer support is available for enquiries about purchases or usage infrom any countries other than Japan. Also, no foreign language other than Japanese is available. Replacements will be made under stipulation of the Elecom warranty, but are not available from outside of Japan.

> Body composition analyser HCS-FS02 series Manual (Quick guide) August 2017 ELECOM CO.,LTD. 8 ©2017 ELECOM Co., Ltd. /

Stand still, and remain upright

of the baby or pet is displayed.

The reading will be finalized after the

number blinks two times, and the weight

When standing on the analyzer holding a baby or pet, looking down at your feet will be hard. Take care not to stand near the edge of the analyzer.

You may fall and hurt yourself.

415

until the measurement completes.

52,75,

(D)