


Names and Functions of Parts

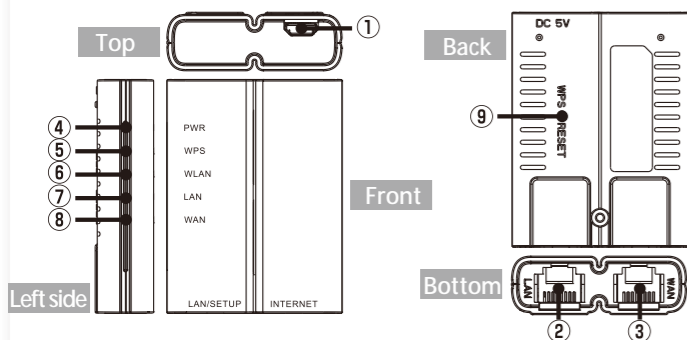

①	Power supply jack (DC IN) (microUSB)	Can also be powered by using a USB (Micro-B to Micro-A) cable.	
②	LAN/Setup port (black)	Connect this product with a PC using a LAN cable. The LAN/SETUP port is also used when changing this product's settings from a PC.	
③	WAN port (blue)	Use a LAN cable to connect this product to the hotel's LAN port.	
④	PWR lamp (blue)	Lit	The power is on.
		Off	The power is off.
⑤	WPS lamp (red)	Lit	The reset function is starting.
		Blinking	The WPS function is in operation.
		Off	The product is operating normally.
⑥	WLAN lamp (blue)	Lit or blinking	The connection with the wireless side is being established.
		Off	The wireless function is turned off.
⑦	LAN lamp (blue)	Lit or blinking	A wired connection is established with the PC side.
		Off	A wired connection is not established with the PC side.
⑧	WAN lamp (blue)	Lit or blinking	The connection with the WAN side is being established.
		Off	The product is disconnected from the WAN side.
⑨	WPS and reset button	Hold down this button for approximately 1 to 9 seconds to start the WPS function. Hold down this button for 10 seconds or more to start the reset function.	

Procedure 1 Connect the wireless LAN router

- Connect the LAN cable, sold separately or provided by the hotel, to a LAN port in your hotel room and this product's WAN port (blue).
- Use one of the following methods to supply power to the product.
 - Powered via your computer's USB port and a USB (Micro-B to Micro-A) cable.
 - Powered via a separately sold USB power supply adapter and a USB (Micro-B to Micro-A) cable.

- Check that this product's lamps are as shown below:

①	PWR lamp	Lit in blue
②	WLAN lamp	Lit in blue or blinking in blue
③	WAN lamp	Lit in blue or blinking in blue

Procedure 2 Perform connection settings with each device


A PC (Wired LAN connection)

- Connect this product's LAN port with a PC using a LAN cable.

* Depending on the PC's settings, it may be necessary to change the PC's IP address settings (automatically obtained or static).

B Windows (Wireless LAN connection)

Windows 8

- Point to the upper-right corner of the screen to display the Charms bar, and then click [Settings].
- Click the wireless icon .
- From the list of networks, select the network that has the same SSID as the network written on the included "Setup Information Sheet," and then click [Connect].
- A window prompting you to enter a security key appears. Type the aforementioned 13-digit encryption key and click [Next]. To connect using the WPS function, depress this product's WPS button for 1 second using the tip of a pen or similar pointed object. Check that the WPS lamp blinks in red.
- If a screen is displayed with the message "Do you want to turn on sharing between PCs and connect to devices on this network?," click "Yes, turn on sharing and connect to devices."

Windows 7/Vista/XP


- Click the wireless LAN icon in the notification area in the lower-right corner of the screen.
- From the list of networks, select the network that has the same SSID as the network written on the included "Setup Information Sheet," and then click [Connect].
- The "Connect to a Network" window appears. Type the aforementioned 13-digit encryption key and click [OK]. To connect using the WPS function, depress this product's WPS button for 1 second using the tip of a pen or similar pointed object. Check that the WPS lamp blinks in red.
- Eventually, the "Connect to a Network" dialogue box will disappear automatically.

C Mac OS (Wireless LAN connection)

- Click the [Apple menu] in the upper left of the screen, and then click [System Preferences].
- Click [Network].
- Check that "Status" for the AirMac (Wi-Fi) has changed to "On."
- From the list of networks, select the network that has the same SSID as the network written on the included "Setup Information Sheet."
- A password entry screen will be displayed, so enter the (13-digit) encryption key written on the "Setup Information Sheet," and then click [OK].


D Smartphones and tablet PCs (iOS/Android)

Install the simple setup application "QR link" (free of charge), and then configure the settings.

- From your terminal, open the AppStore (iOS) or Google Play (Android), search for [QR link], and then install the software.
- On your terminal's home screen, tap the [QR link] icon. 
- Tap [Read QR Code] to read the QR code printed on the included "Setup Information Sheet."
- Follow the instructions on the screen, and then tap [Close] to finish the procedure.

Depending on the hotel, the web browser (such as IE and Safari) may require you to certify yourself. In this situation, check with the hotel regarding how to certify yourself.

各部分的名称和作用

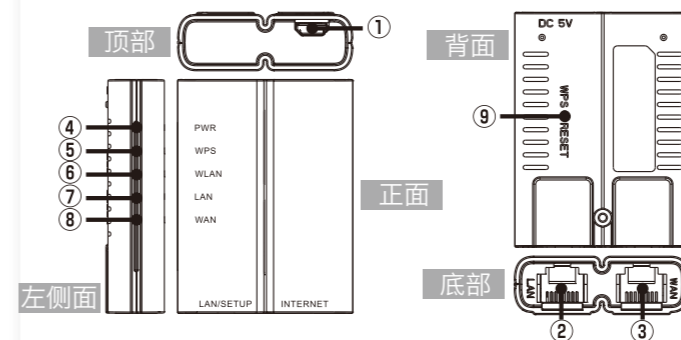

①	电源插孔 (microUSB)	连接符合 USB2.0 (microB-A) 标准的电缆。	
②	LAN/Setup 端口 (黑色)	用 LAN 电缆将本产品 and 电脑相连接。也用于从电脑改变本产品的设置。	
③	WAN 端口 (蓝色)	用 LAN 电缆连接本产品和酒店的局域网端子。	
④	PWR 指示灯 (蓝色)	亮灯	电源接通状态
		熄灭	电源切断状态
⑤	WPS 指示灯 (红色)	亮灯	重置功能启动
		闪烁	WPS 功能工作中
		熄灭	通常时
⑥	WLAN 指示灯 (蓝色)	亮灯 · 闪烁	与无线侧连接着
		熄灭	无线切断状态
⑦	LAN 指示灯 (蓝色)	亮灯 · 闪烁	与电脑侧有线连接着
		熄灭	未与电脑侧有线连接的状态
⑧	WAN 指示灯 (蓝色)	亮灯 · 闪烁	与 WAN 侧连接着
		熄灭	未与 WAN 侧连接的状态
⑨	WPS/Reset 按钮	按住约 1 ~ 9秒后, WPS 功能启动 按住 10 秒以上后, 重置功能启动	

步骤 1 连接无线LAN路由器

- 将另外出售的或酒店内设置的 LAN 电缆连接到酒店客房内的局域网端子和本产品的 WAN 端口 (蓝色)。
- 用以下的任一方法接通电源。
 - 用电脑的 USB 端口 + USB (microB-A) 电缆供电
 - 用另售的 USB 供电适配器 + USB (microB-A) 电缆供电
- 确认本产品指示灯的状态是否如下所示。

①	PWR 指示灯	蓝色亮灯
②	WLAN 指示灯	蓝色亮灯或蓝色闪烁
③	WAN 指示灯	蓝色亮灯或蓝色闪烁

步骤 2 进行与各设备的连接设置


A 电脑 (有线局域网连接)

- 用 LAN 电缆将电脑和本产品的局域网端口相连接。

※对有的电脑设置, 可能要改变电脑IP地址的设置 (自动取得或固定)。

B Windows (无线局域网连接)

Windows 8

- 将鼠标器放到屏幕右上角, 出现超级按钮栏, 点击 [设置]。
- 点击无线的图标 .
- 从网络列表中选择与附带的 "设置信息表" 上所记载的相同的 SSID, 并点击 [连接] 按钮。
- 会弹出安全钥匙的输入窗口, 请输入上面的密钥 (13 位数) 并点击 [下一步]。使用 WPS 功能连接时, 请用笔尖等尖的东西按下本产品的 WPS 按钮 1 秒钟后放开。确认 WPS 指示灯呈红色闪烁。
- 弹出 "启用电脑共享 ..." 窗口后, 点击 "是, 启用共享并连接到设备"。

Windows 7/Vista/XP

- 点击屏幕右下方任务栏上的无线局域网的图标。
- 从网络列表中选择与附带的 "设置信息表" 上所记载的相同的 SSID 并点击 [连接] 按钮。
- 弹出 "连接网络" 的窗口后, 输入上面的密钥 (13 位数) 并点击 [确定]。使用 WPS 功能连接时, 请用笔尖等尖的东西按下本产品的 WPS 按钮 1 秒钟后放开。确认 WPS 指示灯呈红色闪烁。
- 不久, "连接网络" 窗口自动关闭。

C Mac OS (无线局域网连接)

- 点击屏幕左上方的 [苹果菜单], 点击 [系统环境设置]。
- 点击 [网络]。
- 确认 AirMac (Wi-Fi) 的 "状况" 为 "启用"。
- 从 "网络名称" 列表中选择与附带的 "设置信息表" 上所记载的相同的 SSID。
- 弹出密码输入窗口, 输入 "设置信息表" 所记载的密钥 (13 位数) 并点击 [确定]。

D 智能手机/平板电脑 (iOS/Android)

安装简单设置应用程序 "QR link" (免费), 进行设置。

- 从智能手机或平板电脑打开 AppStore (iOS) 或 Google Play (Android), 搜索 [QR link] 并安装。
- 触摸智能手机或平板电脑的主屏上的 [QR link] 图标。 
- 触摸 [QR 码读取], 读取附带的 "设置信息表" 上打印的 QR 码。
- 按照屏幕上的指示, 最后触摸 [关闭] 按钮。

有些酒店可能需要用 Web 浏览器 (IE 或 Safari 等) 进行认证, 如果需要认证, 请向您下榻的酒店确认认证方法。

