ELECOM

WRC-1167GHBK3-A • WRC-F1167ACF2 • WRC-1167FEBK-A • WRC-733FEBK2-A

Setup Guide

This manual provides a summary of and the specifications for this product as well as explains this product's usage precautions. It also contains an FAQ that explains actions you can take if you have problems such as the product malfunctioning. Note that this manual is common for the WRC-1167GHBK3-A · WRC-F1167ACF2 · WRC-1167FEBK-A · WRC-733FEBK2-A.



1	WPS lamp (red)	Blinking: The WPS setting button has been pressed, and the WPS function is running This lamp blinks once every 0.5 second for approximately 2 minutes. Off: The WPS function is not running.
2	POWER lamp (white)	Lit: The product is on. Off: The product is off.
3	2.4G WLAN lamp (white)	These lamps indicate the connection status of the 2.4 GHz band (11n/g/b) and the 5 GHz band (11ac/n/a). Lit: The corresponding band can be used. Blinking: The corresponding band is in use. Off: The corresponding band is disabled.
4	5G WLAN lamp (white)	
5	WPS setting button	Use this button when you are connecting the product to a wireless slave device (such as a wireless adapter) that is equipped with a WPS function. To use this function, press this button for 2 seconds or more.
6	Reset button	When you press this button for approximately 5 seconds, the WPS lamp blinks and the product's settings are initialized (returned to the factory default values). Do not turn off the product until the lamp stops blinking.
7	LAN port/ LAN lamp 1-4 (white)	Use these ports to connect this product to PCs or other network devices over a wired LAN.There is an LED lamp next to each port. Lit: The link to the PC or network device connected over a wired LAN has been established. Blinking: Data is being transferred. Off: The cable is disconnected.
8	INTERNET port/ INTERNET lamp (white)	Connect the cable from the WAN (Internet) device of the modem (ONU, CTU, and other types). There is an LED lamp next to the port. Lit: The link to the WAN device has been established. Blinking: Data is being transferred. Off: The cable is disconnected.
9	DC IN (power supply jack)	Connect the AC adapter included with this product to this jack. Do not connect any AC adapters other than the one included with this product.
10	Stand	You can use the stand included with this product to orient it vertically or horizontally. For details on how to use the stand, see "Installation method and precautions" below.

Using this product in router mode



Connect the power cable of the terminal device.

Check the lit status of the lamps.

· Check that the lamps on the modem or similar device and this product are lit correctly.



Installation method and precautions

· If a power switch is present, slide the switch to the on position.

Onnect the included AC adapter to this product.



This product can be installed vertically or horizontally. With either orientation, be sure to stabilize the product by setting it into the included stand. Also, with either orientation, take measures to prevent the product from falling over and the cables from being pulled out. The product falling over or the cables being pulled out from the connectors while the product is in operation may lead to malfunctions or data loss.

The stand is not fixed to the product. Connect the cables to the product, and then set the product into the stand.

♦ Vertical orientation

Horizontal orientation

· Use the side with the LED lamps as the front. · Use the side with the LED lamps as the top. • Refer to the illustration and set the product • Place the product on the included stand so into the included stand so that the back of the that the product is on top of the center, product fits snugly in the grooves on the back part of the stand, and then ensure that stand.

the product is steady.





Setting this product in router mode

This explanation uses an Android terminal.

Operating environment:

- Android OS 4.0 or later · iOS 8.0 or later
- Windows XP (SP3 or later)/Vista (SP2 or later)/7 (SP1 or later)/8/8.1/10/RT
- We recommend that you turn the Bluetooth function off in order to prevent radio wave interference. In order to install [SkyLink Manager], you require an environment in which you can connect to the Internet.
 - Perform SkyLink setup within 10 minutes of connecting the AC adapter.
- This product only supports Mac OS X 10.9 or later (only devices that are equipped with an Intel CPU).

* The screens may vary depending on the application version.







WRC-GHBK Series/WRC-FEBK-A Series Setup Guide July 28, 2016, Version 4 © 2016 ELECOM CO., LTD. ALL RIGHTS RESERVED.