

NESTOUT

HEATER PAD-1

このたびは、本製品をお買い上げいただき誠にありがとうございます。

本書では操作方法と安全にお取り扱いいただくための注意事項を記載しています。

ご使用前に、この取扱説明書を必ずお読みください。また、本書を読み終わった後は、大切に保管してください。

もくじ

パッケージ内容の確認	1
安全上のご注意(必ずお守りください)	2
各部の名称	6
ヒーターユニット	6
本体カバー	6
コントローラー	7
設置について	8
本製品を使用する	9
電源をオンにする	9
BOOST モードを使用する	10
タイマーを使用する	10
SLEEP モードを使用する	11
使用が終わったら	11
お手入れ方法	12
ヒーターユニット	12
本体カバー	12
保管方法	13
コンパクトに収納したい場合	13
保管環境について	13
保管時のご注意	13
エラー表示について	14
セルフチェック機能	14
エラーランプの確認	14
こんなときは?	15
製品仕様	17
ユーザーサポートについて	18
保証規定	19

Thank you very much for purchasing this product.

This manual details the operation method and precautions for the safe handling of the product.

Please read the manual before use. Store the manual for safekeeping once you have finished reading.


Contents

English

Package contents	21
Safety precautions (Be sure to always follow these precautions)	22
Names of parts.....	26
Heater unit	26
Heater unit cover	26
Controller	27
Installation.....	28
Using the product	29
Turning the power on	29
Using Boost mode	30
Using the timer	30
Using Sleep mode	31
After use.....	31
Cleaning the product	32
Heater unit	32
Heater unit cover	32
Storing the product.....	33
For compact storage.....	33
Storage environment	33
Precautions for storage.....	33
Error indication.....	34
Self-check function.....	34
Error indicator	34
Troubleshooting	35
Specifications.....	37
Compliance status	38

パッケージ内容の確認

ご使用前に、すべてが揃っているかを確認してください。なお、梱包には万全を期していますが、万が一、不足品、破損品などがありましたら、すぐにお買い上げの販売店またはエレコム製品サポートまでご連絡ください。

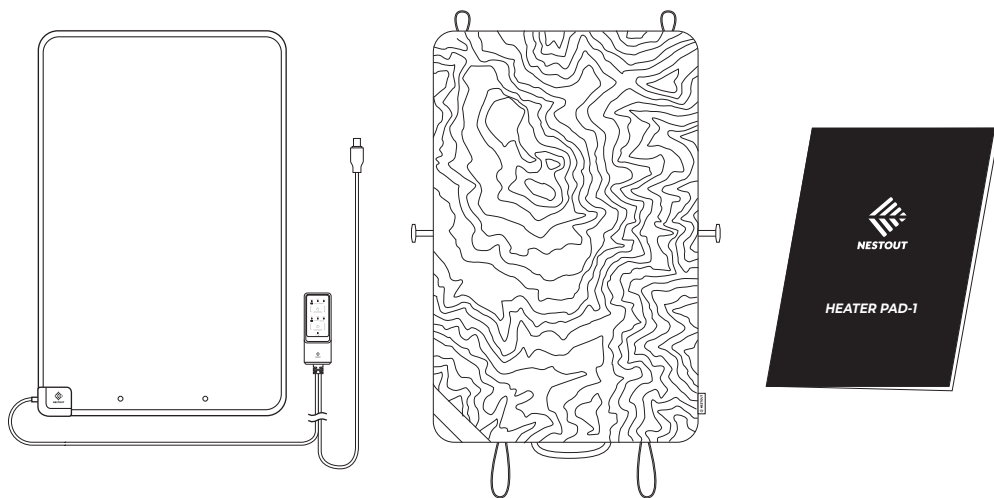


ヒーターユニット
(コントローラー付属) 1台

本体カバー 1枚

取扱説明書(本書) 1部

※本体カバーはヒーターユニットにセットされた状態で梱包されています。

必要に応じて別途ご用意ください

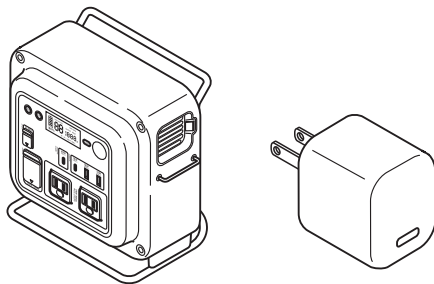

USB Type-C 対応ポータブル電源
または USB Type-C AC 充電器

※イラストは日本仕様のものです。

※本製品に電源を供給するには、電圧 20V・電流 3A、出力 60W に対応した USB Power Delivery 対応のポータブル電源、USB Type-C™ AC 充電器またはモバイルバッテリーが必要です。別途ご用意ください。

安全上のご注意(必ずお守りください)

安全上のご注意

- ご使用の前に、この「安全上のご注意」をよくお読みの上、正しくお使いください。また、お読みになった後は大切に保管してください。
- ここに示した注意事項は、お使いになる人や、他の人への危害、財産への損害を未然に防ぐための内容を記載していますので、必ずお守りください。

表示について

- 次の表示の区分は、表示内容を守らず、誤った使用をした場合に生じる危害や損害の程度を説明しています。

 危険	この表示は取り扱いを誤った場合、使用者が死亡または重傷 *1 を負う可能性が高い内容を示します。
 警告	この表示は取り扱いを誤った場合、使用者が死亡または重傷 *1 を負うことが想定される内容を示します。
 注意	この表示は取り扱いを誤った場合、使用者が傷害 *2 を負うことが想定されるか、または物的損害 *3 の発生が想定される内容を示します。

*1 重傷：失明や、けが、やけど(高温・低温)、感電、骨折、中毒などで後遺症が残るものおよび治療に入院・長期の通院を要するものを指します。

*2 傷害：治療に入院・長期の通院を要さないけがややけど(高温・低温)、感電などを指します。

*3 物的損害：家屋・家財および家畜・ペットなどにかかわる拡大損害を指します。

絵表示について

この取扱説明書および製品への表示では、製品を安全に正しくお使いいただき、ご自身や他の人への危害や財産への損害を未然に防止するためにいろいろな絵表示をしています。その表示と意味は次のようになっています。内容をよく理解してから本文をお読みください。

	禁止(してはいけないこと)を示す記号です。 図の中や近傍に具体的な禁止内容が描かれています。
	指示に基づく行為の強制(必ず実行していただくこと)を示す記号です。 図の中や近傍に具体的な禁止内容が描かれています。
	危険、警告、注意を促す内容(気をつけること)を示す記号です。 図の中や近傍に具体的な禁止内容が描かれています。

危険

	温度設定が「Hi」での長時間の連続使用はしないでください。 低温やけどや熱中症(脱水症状など)をおこすおそれがあります。
	次のような方がお使いのときは、温度設定を「Lo」にするなど注意してください。 ・病気などで体調不良の方、皮膚感覚の弱い方 ・眠気を誘う薬(睡眠薬、かぜ薬など)を服用された方 ・深酒、疲労の激しい方 低温やけどや熱中症(脱水症状など)をおこすおそれがあります。こまめに温度調節するなど、周りの人が注意してください。

⚠ 危険

	ヒーターユニットのみでの使用はしないでください。 低温やけどや事故をおこすおそれがあります。
	肌に直接触れた状態で使用しないでください。

比較的低い温度（40℃～60℃）でも、長時間皮膚の同じところに接触すると、低温やけどを起こすおそれがあります。低温やけどは、熱さ・痛みなど自覚症状がなくても皮膚の深部まで及んでいることがあり、重症化するおそれがあります。十分ご注意ください。

⚠ 警告

	次のような方は、医師と相談して使用してください。 ・医師の治療を受けている方 ・温度感覚喪失が認められる方 ・皮膚知覚障害、または皮膚に異常のある方 ・糖尿病などによる高度な末梢循環障害による知覚障害のある方
	丸めたり、からだに巻きつけたりして使用しないでください。 低温やけどの原因となります。
	使用する前はヒーターユニットを広げ直し、よくのばしてください。 ヒーター同士が接近することで局部的に温度が高くなり、低温やけどや破損の原因になります。
	高温のところでは使用しないでください。 発火や発熱、やけどの原因になります。
	次のような異常が発生したときは、すぐに使用を中止してください。 ・煙が出ている、異臭がする ・内部に水や異物が入ったとき ・落としたり、亀裂などの破損、変形、劣化を発見したりしたとき ・ヒーターユニットやコントローラー部分が異常に熱いとき ・給電用 USB ケーブルを動かすと通電したり、切れたりするとき 発熱・火災・やけど・けが・感電などの原因となります。 すぐに給電用 USB ケーブルの USB Type-C プラグを給電機器から外し、煙が出なくなったことを確認してから、お買い上げの販売店またはエレコム製品サポートにご相談ください。 お客様による修理は危険ですので、絶対にしないでください。
	分解や修理、改造をしないでください。 故障・発熱・火災・やけど・感電などの原因となります。
	ヒーターユニットにピンや針を突き刺さないでください。 内部のヒーターが傷つき、火災や感電の原因となります。
	お手入れの際は、必ずヒーターユニットを本体カバーから抜いてください。
	雨の中で使用しないでください。 感電するおそれがあります。
	濡れた手でヒーターユニットや給電用 USB ケーブルの USB Type-C プラグを触らないでください。 故障・発熱・火災・やけど・感電の原因となります。

⚠ 警告

❗	給電用 USB ケーブルの USB Type-C プラグは、奥までしっかりと挿し込んでください。 挿し込みが不十分だと、接触不良などにより、発熱・火災・やけど・感電の原因となります。
⊘	ケーブルを束ねたまま使用しないでください。 発熱・火災・やけど・感電などの原因となります。ケーブルは必ずのばして使用してください。
⊘	ケーブルを無理に引っ張ったり、曲げたり、重いものを上に載せたりしないでください。また、プラグ部分以外を持ってケーブルの抜き挿しをしないでください。 外装コードが傷ついたり断線したりして、発熱・火災・やけど・感電などの原因となります。
⊘	子どもには使用させず、本製品の上で、遊ばせないでください。 事故やけがの原因となります。
⊘	ペットに使用しないでください。
⊘	USB Type-C プラグの差し込み口に金属類を挿し込まないでください。 感電、発熱や発火の原因となります。

⚠ 注意


❗	はじめてご使用いただくときや、長時間使用しなかった本製品をご使用いただくときには、取扱説明書のとおり操作を行い、正常に作動することを確認してからご使用ください。
⊘	ヒーターユニットがねじれた状態で使用したり、保管しないでください。 内部のヒーターが傷つき、破損の原因となります。
⊘	下記の場所では使用したり、保管したりしないでください。 ・直射日光のあたる場所 ・暖房器具の近くや真夏の車内など温度の高い場所 ・浴室などの湿気の多い場所 ・水気の近く ・ホコリが多い場所 ・振動の多い場所 火災、感電、故障の原因となります。
❗	本製品の使用によって、強い刺激や、肌に湿疹、発赤、かゆみなどの異常を感じたときは、ただちに使用を中止し、医師に相談してください。 事故や体調不良の原因となります。
⊘	ヒーターユニットを洗濯しないでください。 破損のおそれがあります。
⊘	保管時はケーブルをヒーターユニットに巻き付けしないでください。 コードに負担がかかり断線し、ショートによる火災などの原因になります。
⊘	他の暖房器具と一緒に使用しないでください。 事故・故障の原因となります。
⊘	強い電界を出す無線機の近くで使用しないでください。 故障の原因となります。

 注意

	コントローラーの上に重いものを載せたり、コントローラーを投げたり、強い衝撃を与えないでください。
	コントローラーやケーブルを製品の上に置いたり、かぶせたり、コントローラー収納ポケットの中に入れるなどの状態で使用しないでください。
	本製品を廃棄するときは、お住まいの市区町村の指導に従ってください。

各部の名称


■ヒーターユニット

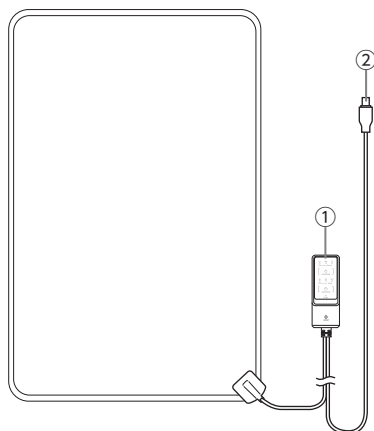

① コントローラー（詳しくは次ページ）

② USB Type-C プラグ

■本体カバー

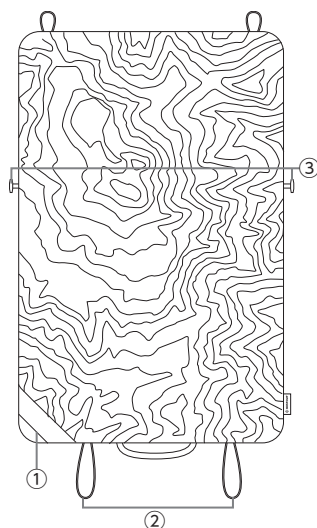


裏面

① コントローラー収納ポケット

② 収納コード

③ 留め具

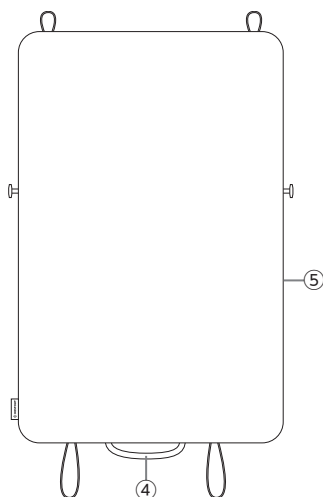


表面※

※使用時はこの面を上にした状態で使用してください

④ 持ち手

⑤ 本体収納ポケット

■コントローラー

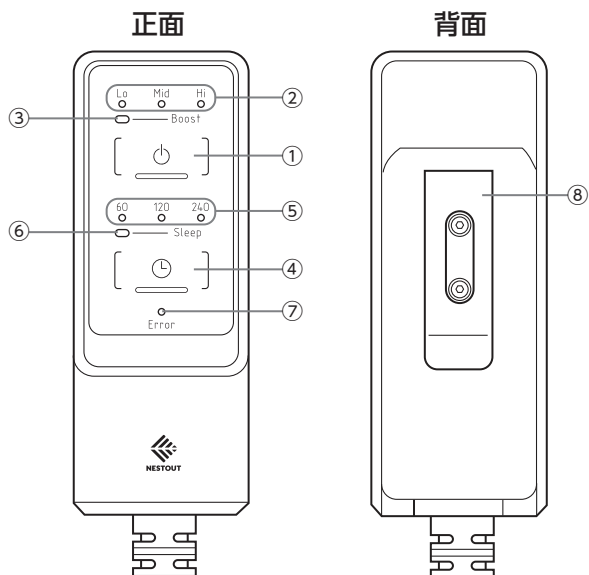

① 電源 / 温度ボタン

- 長押し 電源 ON/OFF
- 単押し 押すたびに温度設定が変更
- ダブルクリック BOOST モード

② 温度ランプ

③ BOOST ランプ

④ タイマーボタン

- 単押し 押すたびにタイマー設定が変更
- ダブルクリック SLEEP モード

⑤ タイマーランプ

⑥ SLEEP ランプ

⑦ エラーランプ

本製品に何らかのエラーが発生したときに点灯または点滅します。

詳しくは「エラー表示について」を参照してください。 ➡ P.14


⑧ クリップ

設置について

いすや寝袋などに設置してお使いください。



いす

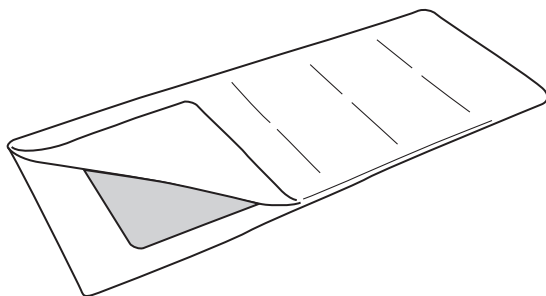

寝袋

-
- ⚠
- いすの形状によってフィットしない可能性があります。
 - ヒーターユニットの一部に強い負荷がかかるような使用方法をしないでください。
 - 凹凸や段差ある場所で設置しないでください。
 - ヒーター線のずれを防止するため、使用する前に本製品を一回広げ直してください。
 - ケーブルの配線を無理のない状態で設置してください。
 - コントローラーや電源ケーブルを製品の上に置いたり、かぶせたり、コントローラー収納ポケットの中に入れるなどの状態で使用しないでください。
-



本製品を使用する

■電源をオンにする

- ① ヒーターユニットの USB Type-C プラグをポータブル電源、AC 充電器などの電源に接続します。
- ② 電源に接続すると、コントローラーのランプが点灯し、セルフチェックを開始します。
約 3 秒間、ランプが順次に消灯し、セルフチェックが完了します。

ポータブル電源の場合

AC 充電器の場合

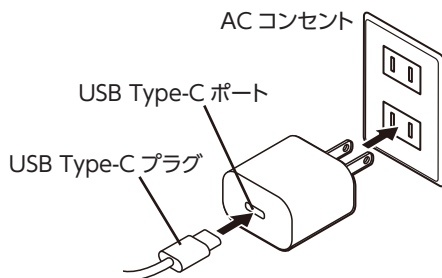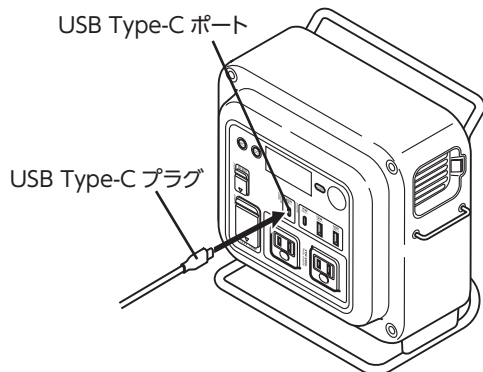


※イラストは日本仕様のものです。

- ❗ 本製品は 60W 対応の出力電源が必要です。USB Type-C 出力が 20V/3A 以上に対応している電源であることをご確認ください。
AC 充電器に接続して使用する場合は、USB Type-C ポート(USB Power Delivery 対応)の出力が 65W 以上に対応している AC 充電器に接続してください。(推奨 USB AC 充電器: エレコム製の USB Type-C AC 充電器)
- 一部の AC 充電器やモバイルバッテリーでは、保護機能が作動して出力が停止したり、温度調整中に電源が切れる場合があります。

- ③ コントローラーの電源 / 温度ボタンを2秒間長押しします。

電源が ON になり、温度ランプ[Lo]とタイマーランプ[60]が点灯します。

※電源 ON 時は、常に温度[Lo]、タイマー [60]になります。

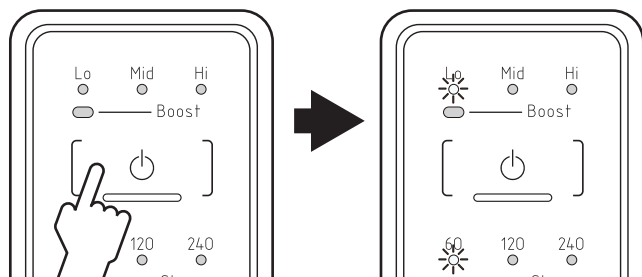

- ④ 電源 / 温度ボタンを単押するたびに温度が変わります。




[Lo] 約 30℃ [Mid] 約 40℃ [Hi] 約 50℃

■ BOOST モードを使用する

最大 20 分間 55℃設定で動作します。


- ① 動作中に電源 / 温度ボタンをダブルクリックします。
BOOST ランプが点灯します。

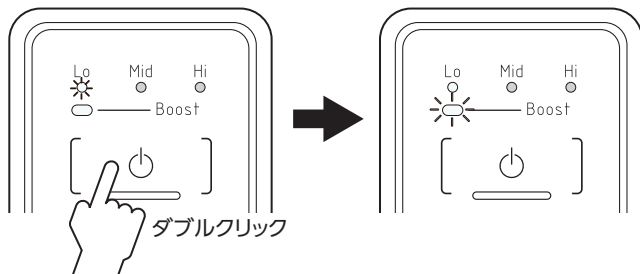

- ② BOOST モードが終了すると元の設定温度に戻ります。
※BOOST モードを途中でやめるときは、電源 / 温度ボタンをダブルクリックします。
※SLEEP モード中でも、BOOST モードは設定できます。

■ タイマーを使用する

- ① 動作中にタイマーボタンを単押しします。

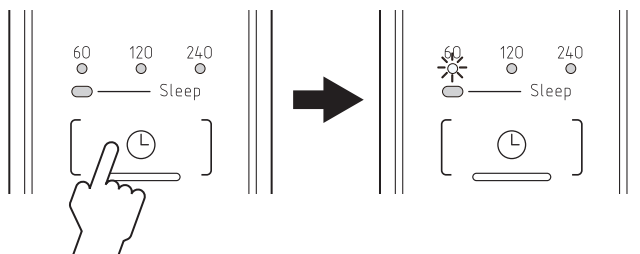

- ② タイマーボタンを単押しするたびに設定時間が変わります。




※タイマー設定を変更すると、タイマーの動作はリセットされ、最初からの経過時間になります。

■ SLEEP モードを使用する

SLEEP モードに設定すると、7.5 時間の間自動的に温度を管理し、SLEEP モード終了後は、電源は OFF になります。

- ① 動作中にタイマーボタンをダブルクリックします。

SLEEP ランプが点灯します。

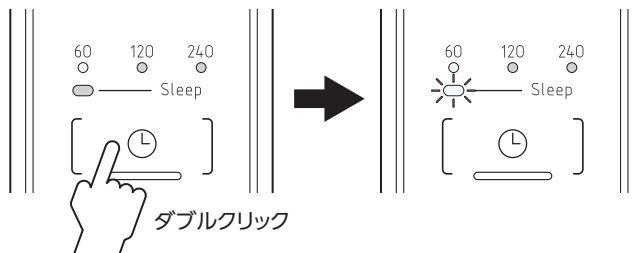


※ 設定された温度により3段階で温度を調整します。

※ SLEEP モードを途中でやめるときは、タイマーボタンをダブルクリックします。タイマーはリセットされ、温度設定は SLEEP モードに設定する前の設定に戻ります。

※ SLEEP モード中でも、BOOST モードは設定できます。

SLEEP モード起動

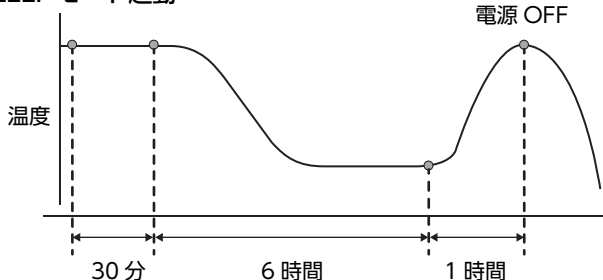

SLEEP モード温度管理パターン

温度設定	30 分	→	6時間	→	1 時間
Hi	50℃	→	37℃	→	42℃
Mid	40℃	→	33℃	→	38℃
Lo	30℃	→	25℃	→	30℃

■ 使用が終わったら

- ① 使用を終了するときには、コントローラーの電源 / 温度ボタンを長押しして、電源を OFF にします。
- ② 電源が OFF になっていることを確認してから、給電用ケーブルを給電機器の USB Type-C ポートから外してください。

お手入れ方法

■ヒーターユニット


 家庭での 洗濯禁止	 漂白剤の 使用禁止	 タンブル乾燥 禁止	 日陰での 平干し乾燥が よい	 アイロンがけ 禁止	 ドライ クリーニング 禁止	 ウェット クリーニング 禁止
---	---	---	---	---	--	---

- ① ヒーターユニットは洗濯できません。
- 汚れた場合は、必ず電源プラグを抜いてから、水で濡らして固く絞った布で軽く拭き取ってください。
- シンナー・ベンジン等の溶剤は使用しないでください。

■本体カバー

- ① 洗濯の際は必ずヒーターユニットを外してください。

- ① ヒーターユニットを本体カバーから取り出します。

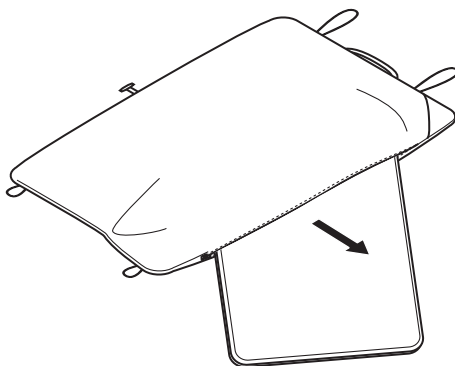

- ② 洗濯絵表示に従って、本体カバーを洗います。


 40℃以下の 湯で手洗い します	 漂白剤の 使用禁止	 タンブル乾燥 禁止	 日陰で つり干し	 アイロンがけ 禁止	 ドライ クリーニング 禁止	 ウェット クリーニング 禁止
---	---	---	--	---	--	---

- ① 中性洗剤をご使用ください。
- 漂白剤を使用しないでください。
- 乾燥時、直射日光または熱を避けてください。
- 脱水の際は洗濯ネットに入れてください。
- アイロンをかけないでください。
- 濡れた状態で強い摩擦がかかると、色移り・色落ちすることがありますのでご注意ください。
- 色移りや生地の変質防止のため、濡れたまま長時間放置しないでください。


保管方法

■コンパクトに収納したい場合

- ① ヒーターユニットの温度が冷めていることを確認します。(安全のため確認手順が必要です)
- ② コントローラー、給電用ケーブルを本体カバーのコントローラー収納ポケットに収納します。

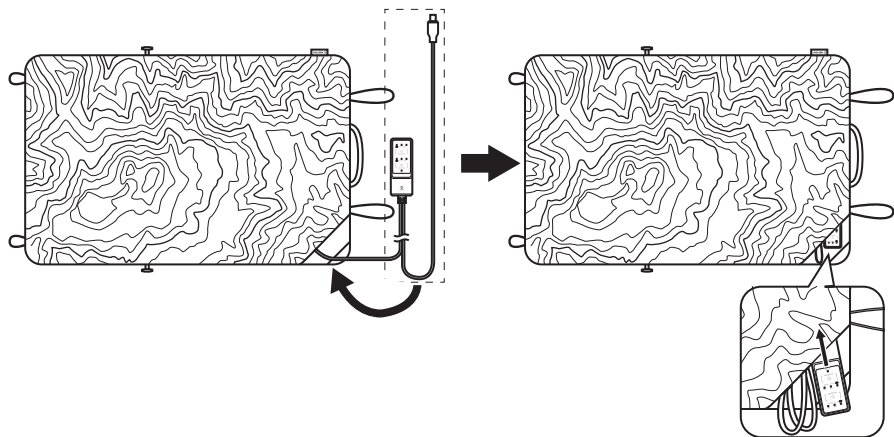

- ③ 本体を丸めて、収納コードと留め具で止めます。

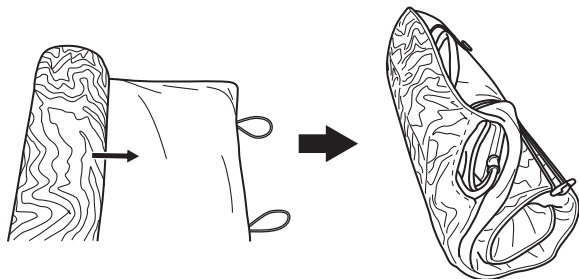

■保管環境について

本製品は、次の条件を満たしている環境で保管してください。

保管温度：-10℃～ 40℃

保管湿度：20%～60% RH


■保管時のご注意

- 下記の場所には保管しないでください。
 - 直射日光のあたる場所
 - 高温、多湿、水気の近く、ホコリが多い場所
 - 振動の多い場所
 - 化学薬品の保管場所や腐食性ガスが発生する場所
- 乳幼児の手がとどかない場所に置いてください。
- 長時間使用しないときは、できるだけ常温(10℃～ 30℃)で保管してください。

エラー表示について

■ セルフチェック機能

本製品は故障や接続電源の出力条件を検知するセルフチェック機能を搭載しています。
電源に接続すると自動的に実施します。セルフチェックを実施中、ランプが点灯→消灯します。

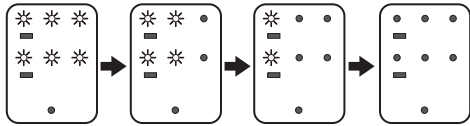

セルフチェックは約 3 秒かかり、セルフチェックを終えるまで電源 ON などの操作を行うことができません。

■ エラーランプの確認

セルフチェックで異常が検知されると、エラーランプが点灯し、電源を ON にすることができません。
異常の種類によって点灯方式が異なります。

点灯パターン	状態	エラー内容
ランプ全体が 0.5 秒間隔で点滅し続ける 	異常検出 (部品破損)	部品の破損を検知しました。 使用を中止し、エレコム製品サポートにお問い合わせください。➡ P.18
ランプ全体が点灯し続ける 	異常検出	過電圧、過電流や部品の異常発熱などの異常を検知し、保護機能が作動しています。 USB Type-C プラグを抜き、しばらく時間をおいてから USB プラグを挿し直して電源を入れてください。 それでも何度か同じ現象が出た場合は製品の故障と考えられます。 使用を中止し、エレコム製品サポートにお問い合わせください。➡ P.18
エラーランプのみが 0.5 秒間隔で点滅し続ける 	電源出力 条件不足	接続している電源が使用条件を満たしていません。 電圧 20V・電流 3A、出力 60W に対応していることを確認してください。 複数ポートの AC 充電器に接続して使用する場合、すべてのケーブルを抜き、本製品のみ状態で USB Type-C プラグを挿し直し、正常に作動するかを確認してください。 ※一部の AC 充電器、ポータブル電源やモバイルバッテリーなどでは、正常に動作しない場合があります。

こんなときは？

こんなとき	考えられる原因	対処のしかた
電源が入らない	電源の出力が不足している	接続する電源が電圧 20V・電流 3A、出力 60W に対応していることを確認してください。 ※一部の AC 充電器やモバイルバッテリーでは、保護機能が作動して出力が停止したり、温度調整中に電源が切れる場合があります。そのため、すべての電源での動作を保証するものではありません。あらかじめご了承ください。
	過電圧やヒーターの異常発熱など、何らかの原因で保護機能が作動した	USB Type-C プラグを抜き、しばらくしてから USB プラグを挿し直して電源を入れてください。 それでも同じ現象が出た場合、エレコム製品サポートにお問い合わせください。⇒ P.18
	製品内部の部品が破損している	直ちに使用を中止し、エレコム製品サポートにお問い合わせください。⇒ P.18
	USB Type-C プラグがしっかり挿し込まれていない	給電機器の USB ポートにしっかりと挿し込んでください。
	ポータブル電源やモバイルバッテリーの充電が切れている	ポータブル電源やモバイルバッテリーを充電してください
	USB Type-C プラグが接触不良	USB Type-C プラグの状態を確認してください。
電源がすぐに切れる 使用中電源が勝手に切れる	電源の電圧は 20V に対応してるが、電流、出力が不足している	- 接続する電源が電圧 20V・電流 3A、出力 60W に対応していることを確認してください。 - AC 充電器に接続して使用する場合はシングルポートかつ最低 65W 以上 AC 充電器に接続してください。

製品仕様

入力端子	USB Type-C コネクタ USB Power Delivery対応
定格入力電圧	DC20V
定格入力電流	3A
定格消費電力	60W
タイマー	60 分、120 分、240 分、SLEEP モード (7.5 時間)
温度設定	【Lo】約 30℃、【Mid】約 40℃、【Hi】約 50℃、【Boost】約 55℃
本体サイズ	【ヒーターユニット】 【幅】430mm×【奥行】680mm 【本体カバー装着時】 【幅】450mm×【奥行】700mm
重量	約960g
使用環境温湿度	-10℃～40℃ 20%～60% RH
保管環境温湿度	-10℃～40℃ 20%～60% RH
素材	【ヒーターユニット】 表地：ポリエステル 100% 中材：ポリウレタン、EVA 樹脂、スチレン・ブタジエンゴム 【本体カバー】 表地：ポリエステル 100% 裏地：ポリエステル 80%、コットン 20%
生産国	中国

ユーザーサポートについて

選べる! 充実サポート

LINE チャット でサポート

LINEアプリから
友だち追加でかんたんに
チャットでお問い合わせ!

Web チャット でサポート

ブラウザからでも
会員登録なしにお気軽に
ご相談いただけます。

チャット
サポートは
QR
からアクセス!



電話でサポート

エレコム製品サポートからカテゴリーごとに「よくあるご質問」や「サポートコミュニティ」をご紹介します。電話によるサポートが必要な場合は、サポートダイヤルをご用意しています。

連絡先はコチラから
8056.jp

※ LINEおよびLINEヤフーロゴは、LINEヤフー株式会社の登録商標です。

保証規定

■保証期間

1年間

■保証対象

保証対象は本製品の本体・本製品の動作に起因する部分のみとさせていただきます。取扱説明書および消耗品は対象外です。

■保証内容

1. 弊社が定める保証期間(本製品ご購入日から起算されます。)内に、適切な使用環境で発生した本製品の故障に限り、無償で本製品を修理または交換いたします。
※保証期間を超過している場合、有償となります。

■無償保証範囲

2. 以下の場合には、保証対象外となります。
 - (1) 購入証明書および故障した本製品をご提出いただけない場合。
※購入証明書は、購入日、購入店、型番が確認できるもの(レシート・納品書など)を指します。
 - (2) 購入証明書に偽造・改変などが認められた場合。
 - (3) 中古品として本製品をご購入された場合。(リサイクルショップでの購入、オークション購入での中古品を含む)
 - (4) 弊社および弊社が指定する機関以外の第三者ならびにお客様による改造、分解、修理により故障した場合。
 - (5) 弊社が定める機器以外に接続、または組み込んで使用し、故障または破損した場合。
 - (6) 通常一般家庭、一般オフィス内で想定される使用環境の範囲を超える温度、湿度、振動などにより故障した場合。
※使用環境条件が記載されている製品については製品記載の範囲を超えないこと。
 - (7) 本製品を購入いただいた後の輸送中に発生した衝撃、落下などにより故障した場合。
 - (8) 地震、火災、落雷、風水害、その他の天変地異、公害、異常電圧などの外的要因により故障した場合。
 - (9) 接続されている他の機器に起因して、本製品に故障、損傷が生じた場合。
 - (10) ソフトウェア(ファームウェア、ドライバ他)のアップデート作業によって故障、障害が生じた場合。
 - (11) 本製品の、パッケージ、取扱説明書、ならびに弊社ホームページ内などに記載の使用方法、および注意に反するお取り扱いによって生じた故障、損傷の場合。
 - (12) その他、無償修理または交換が認められない事由が発見された場合。

■修理

3. 修理のご依頼は、購入証明書をお買い上げいただいた製品一式(付属品、セット品含む)に添えて、お買い上げの販売店にお持ちいただくか、弊社修理センターに送付してください。
4. 弊社修理センターへご送付いただく場合の送料はお客様のご負担となります。(返送時の送料は弊社が負担いたします。)また、ご送付いただく際、適切な梱包の上、紛失防止のため受渡の確認できる手段(宅配や簡易書留など)をご利用ください。なお、弊社は運送中の製品の破損、紛失については一切の責任を負いかねます。
5. 同機種での交換ができない場合は、保証対象製品と同等またはそれ以上の性能を有する他の製品と交換させていただく場合があります。
6. 保証期間内にて修理、交換により交換された、旧部品または旧製品などは返却いたしかねます。
7. 記憶メディア・ストレージ製品において、修理センターにて製品交換を実施した際にはデータの保全是行わず、全て初期化いたします。記憶メディア・ストレージ製品を修理に出す前には、お客様ご自身でデータのバックアップを取っていただきますようお願いいたします。
8. 修理期間中における代替機および貸出機のご用意はありません。

■免責事項

9. 本製品の故障について、弊社に故意または重大な過失がある場合を除き、弊社の債務不履行および不法行為などの損害賠償責任は、本製品購入代金を上限とさせていただきます。
10. 本製品の故障に起因する派生的、付随的、間接的および精神的損害、逸失利益、ならびにデータ損害の補償などについては、弊社は一切責任を負いかねます。
11. データを取扱う際には自己責任において、必ず定期的なバックアップを取ってください。本製品の故障または使用によって生じた、保存データの消失、破損などについては一切保証いたしません。

■有効範囲

12. この保証規定は、日本国内においてのみ有効です。

エレコム株式会社は、日本以外の国でのご購入・ご使用による問い合わせ・サポート対応はいたしかねます。


This warranty is valid only in Japan. In "ELECOM CO., LTD. (Japan)", no customer support is available for enquiries about purchases or usage in/from any countries other than Japan.

NESTOUT HEATER PAD-1
OD-NESTHP1シリーズ
取扱説明書
2026年4月 第1版
エレコム株式会社


- 本書の著作権は、エレコム株式会社が保有しています。
- 本書の内容の一部または全部を無断で複製 / 転載することを禁止させていただきます。
- 本書の内容に関するご意見、ご質問がありましたら、エレコム製品サポートまでご連絡願います。
- 本製品の仕様および外観は、製品の改良のため予告なしに変更する場合があります。
- 本製品を使用したことによる他の機器の故障や不具合などについては、責任を負いかねますのでご了承ください。
- 本製品のうち、戦略物資または役務に該当するものの輸出にあたっては、外為法に基づく輸出または役務取引許可が必要です。
- USB Type-C and USB-C are trademarks of USB Implementers Forum.
- その他本書に記載されている会社名・製品名などは、一般に各社の商標または登録商標です。

Package contents

Make sure that all items are present before using the product. Every effort has been made to ensure proper packaging. However, in the event any shortage or damage is discovered, contact your dealer.

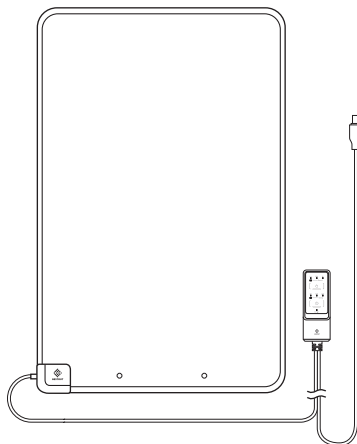

Heater unit
(with controller) x 1

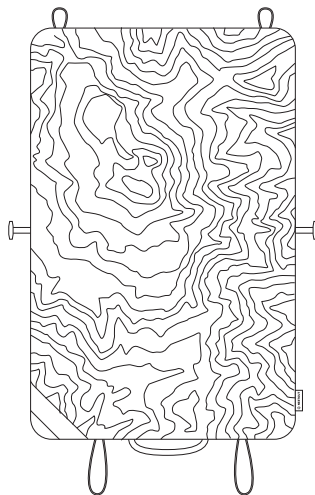


Heater unit cover x 1



Manual (this document) x 1

*The heater unit is packaged with the heater unit cover attached.

Please purchase one separately as needed.

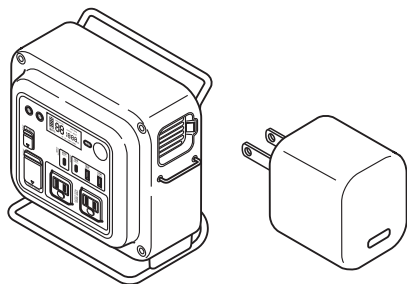

USB Type-C-compliant portable power station
or USB Type-C AC charger

*The illustration shows a Japanese model.

*To supply power to the product, a USB Power Delivery-compatible portable power station or USB Type-C® AC charger or power bank that supports 20 V/3 A (60 W output) is required. Please prepare one separately.

Safety precautions (Be sure to always follow these precautions)

Safety precautions and Important instructions (Retain for future use.)

- Before using the product, read these safety precautions carefully and use the product correctly. Store the manual for safekeeping once you have finished reading.
- Be sure to follow the precautions described here to prevent hurting yourself and others or damaging property.

When storing the appliance, allow it to cool down before folding.

Do not crease the appliance by placing items on top of it during storage.

Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, return it to the supplier before switching it on again.

This appliance is not intended for medical use in hospitals.

This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating; children under the age of three are not to use this appliance due to their inability to react to overheating.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

The appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature value.

The cable and control unit of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that excess ties and electric cords shall be arranged in a safe way.



Do not insert pins



Not to be used by very young children (0-3 years)



Read the instructions



This product is Class III equipment

About the icons

■ The following icons describe the different degree of harm or damage which may result from incorrect use or failure to observe the precautions.

 DANGER	This icon indicates that there is a high risk of death or serious injury*1 to the user if the product is improperly handled.
 WARNING	This icon indicates that there is a risk of death or serious injury*1 to the user if the product is improperly handled.
 CAUTION	This icon indicates that there is a risk of injury*2 to the user or damage to property*3 if the product is improperly handled.

*1 Serious injury: refers to injuries such as blindness, physical injuries, burns (from high or low temperatures), electric shock, fractures, and poisoning that result in lasting aftereffects, or that require hospitalization or long-term hospital visits for treatment.

*2 Injury: refers to injuries such as physical injuries, burns (from high or low temperatures), and electric shock that do not require hospitalization or long-term hospital visits for treatment.

*3 Property damage: refers to extended damage to homes, household property, livestock, pets, and such.

About the pictograms

The instructions in this manual and the labels on the product use various pictograms to ensure the safe and correct use of the product and to prevent harm to you and other people or damage to property. The pictograms and their definitions are as follows. Fully understand them before reading the main text.

	This pictogram indicates prohibited actions. Specific prohibitions are depicted in or near the image.
	This pictogram indicates mandated actions. Specific details are depicted in or near the image.
	This pictogram indicates dangers, warnings, or cautions. Specific details are depicted in or near the image.

 DANGER	
	Avoid prolonged continuous use when the temperature is set to “Hi”. There is a risk of low-temperature burns or heatstroke (including dehydration).
	Take special care, such as setting the temperature to “Lo”, when the following types of people are using the product. • People who are unwell due to illness, or people with reduced skin sensitivity • People who have taken medications that cause drowsiness (such as sleeping pills or cold medicine) • People who have been drinking heavily or are extremely fatigued There is a risk of low-temperature burns or heatstroke (including dehydration). People nearby should pay close attention and adjust the temperature frequently.
	Do not use the heater unit by itself. Doing so may cause low-temperature burns or accidents.
	Do not use the product when it is in direct contact with the skin.

Even at relatively low temperatures (40 °C to 60 °C/104 °F to 140 °F), prolonged contact with the same area of skin may cause low-temperature burns. Low-temperature burns may extend to deeper layers of the skin even without noticeable symptoms such as heat or pain, and may become severe. Please exercise extreme caution.

⚠ WARNING

	People in the following categories should consult a physician before using the product. • People currently receiving medical treatment • People with impaired temperature sensation • People with skin sensory disorders or skin issues • People with sensory impairment caused by severe peripheral circulatory disorders, such as those associated with diabetes
	Do not fold the product or wrap it around the body during use. Doing so may cause low-temperature burns.
	Before use, spread out the heater unit fully and smooth it out. If the heaters are positioned too close to each other, localized overheating may occur, causing low-temperature burns or damage to the product.
	Do not use the product in high-temperature environments. Doing so may cause ignition, overheating, or burns.
	Stop using the product immediately if any of the following abnormalities occur. • Smoke or odors are coming from the product • Water or foreign objects get inside the product • The product is dropped, damaged by cracking, deformed, or deteriorated • The heater unit or controller becomes abnormally hot • Power turns on and off when the USB power cable is moved There is a risk of overheating, fire, burns, injuries, or electric shock. Immediately disconnect the USB Type-C plug of the USB power cable from the power source. After confirming that no smoke is coming from the product, consult your dealer. Doing repairs by yourself is dangerous and should never be done.
	Do not disassemble, repair, or modify the product. Doing so may cause malfunction, overheating, fire, burns, or electric shock.
	Do not insert pins or needles into the heater unit. Doing so may damage the internal heater and cause fire or electric shock.
	When cleaning the product, be sure to remove the heater unit cover from the heater unit.
	Do not use the product in the rain. Doing so may cause electric shock.
	Do not touch the heater unit or the USB Type-C plug of the USB power cable with wet hands. Doing so may cause malfunction, overheating, fire, burns, or electric shock.
	Firmly insert the USB Type-C plug of the USB power cable all the way in. A loose connection may result in overheating, fire, burns, or electric shock.
	Do not use the cable while it is bundled. Doing so may cause overheating, fire, burns, or electric shock. Always fully extend the cable before use.
	Do not forcibly pull, bend, or place any heavy objects on the cable. Also, do not connect or disconnect the cable by holding any part other than the plug. Doing so may cause the external cord to be damaged or break, or cause overheating, fire, burns, or electric shock.
	Do not allow children to use the product, and do not let them play on it. Doing so may cause accidents or injury.

WARNING


	Do not use the product for pets.
	Do not insert metal objects into the USB Type-C port. Doing so may cause electric shock, overheating, or ignition.

CAUTION

	When using the product for the first time, or when using it after a long period of non-use, operate it according to the manual and confirm that it is functioning properly before use.
	Do not use or store the heater unit when it is twisted. Doing so may damage the internal heater and cause breakage.
	Do not use or store the product in the following places: • Places exposed to direct sunlight • High-temperature places such as near heating appliances or inside a car in midsummer • Humid places such as bathrooms • Near water • Dusty places • Places with a lot of vibration Doing so may cause fire, electric shock, or malfunction.
	If you experience strong irritation or notice any abnormalities such as rash, redness, or itching on the skin while using the product, stop using it immediately and consult a physician. Not doing so may result in accidents or adverse health effects.
	Do not wash the heater unit. Doing so may cause damage.
	When storing the product, do not wrap the cable around the heater unit. Doing so may place stress on the cable, cause wire breakage, and result in fire due to short-circuiting.
	Do not use the product together with other heating devices. Doing so may cause accidents or malfunction.
	Do not use the product near radio equipment that emits strong electromagnetic fields. Doing so may cause malfunction.
	Do not place heavy objects on the controller, throw the controller, or subject it to strong impact.
	Do not use the product when the controller or cable is placed on or covered by the product or stored inside the controller pocket.
	Follow your local laws and regulations when disposing of the product.

Names of parts


■ Heater unit

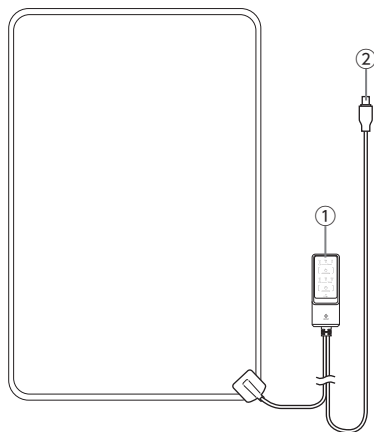


① Controller (refer to the next page)

② USB Type-C plug

■ Heater unit cover

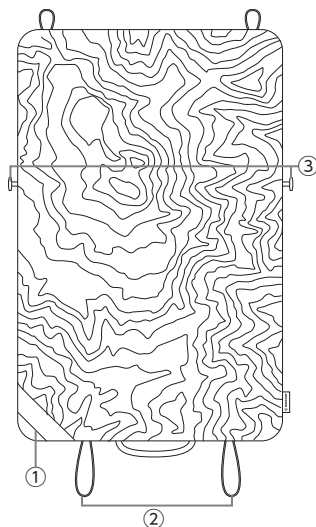

Back

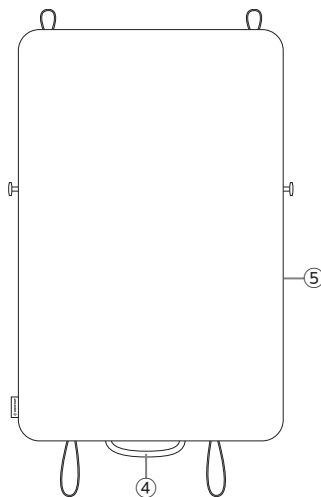

Front*

*Use with this side facing up.

① Controller pocket


② Strap

③ Hook

④ Handle

⑤ Main unit pocket

■ Controller

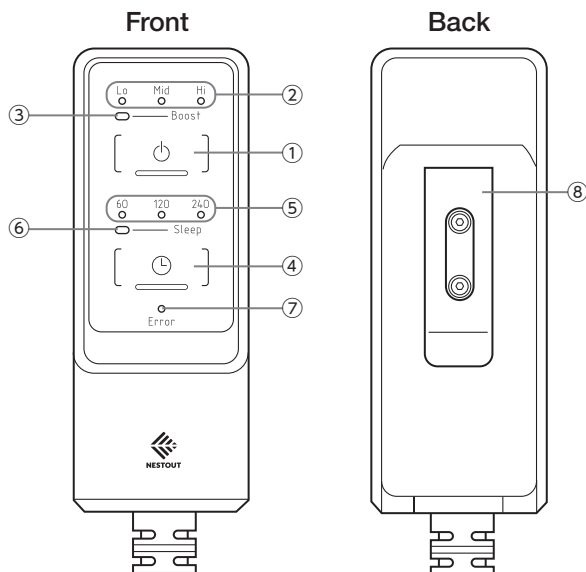

① Power/Temperature button

- Long press: Turns the power on/off
- Short press: Switches the temperature setting each time
- Double-click: Boost mode

② Temperature indicator

③ Boost indicator

④ Timer button

- Short press: Switches the timer setting each time
- Double-click: Sleep mode

⑤ Timer indicator

⑥ Sleep indicator

⑦ Error indicator

The indicator lights up or flashes when an error occurs in the product.

For details, refer to “Error indication” ➔ Page 34


⑧ Clip

Installation

Use the product on a chair, sleeping bag, or similar surface.



Chair

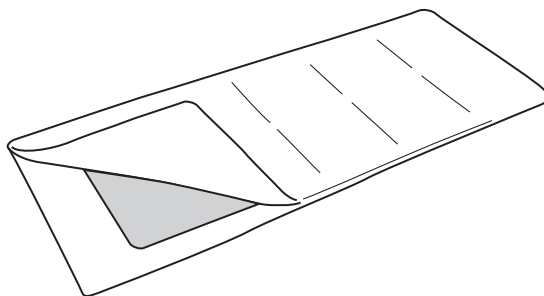

Sleeping bag




- Depending on the shape of the chair, the product may not fit properly.
- Do not place excessive stress on a specific part of the heater unit during use.
- Do not install the product on uneven surfaces or in areas with steps.
- To prevent the heater wires from shifting, unfold the product once before use.
- Arrange the cable routing so that there is no excessive bending or strain.
- Do not use the product when the controller or power cable is placed on or covered by the product or stored inside the controller pocket.

Using the product

■ Turning the power on

- ① Connect the USB Type-C plug of the heater unit to a power source such as a portable power station or an AC charger.
- ② When the product is connected to a power source, the indicators on the controller light up and a self-check begins.


After approximately 3 seconds, the indicators turn off sequentially, indicating that the self-check is complete.

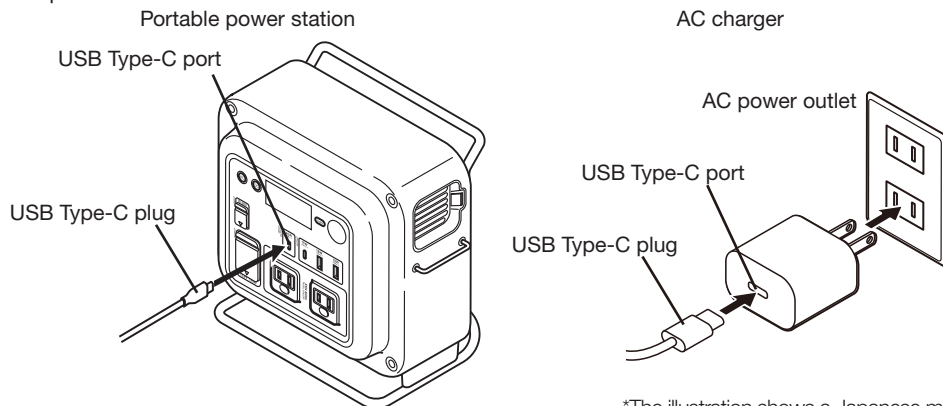

*The illustration shows a Japanese model.

- This product requires a power source with a 60 W output capacity. Make sure to use a power source that supports USB Type-C output of 20 V / 3 A or higher.
When using an AC charger, connect the product to an AC charger that has a USB Type-C port (USB Power Delivery compatible) with a 65 W or higher output capacity. (Recommended USB AC charger: ELECOM USB Type-C AC charger)
- With some AC chargers or power banks, the protection function may be activated and stop the output, or the power may turn off during temperature adjustment.

- ③ Press and hold the Power/Temperature button on the controller for 2 seconds.
The power turns on and the temperature indicator “Lo” and the timer indicator “60” light up.
* At power-on, the temperature is always set to “Lo” and the timer to “60”.

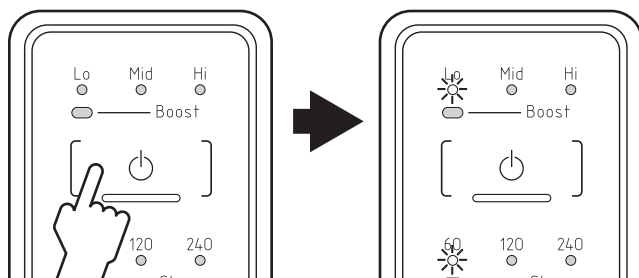

- ④ Each time the Power/Temperature button is pressed, the temperature changes.




Lo: approx. 30°C (86°F); Mid: approx. 40°C (104°F); Hi: approx. 50°C (122°F)

■ Using Boost mode

Boost mode operates at a temperature of 55°C (131°F) for up to 20 minutes.

- ① Double-click the Power/Temperature button during operation.

The Boost indicator lights up.

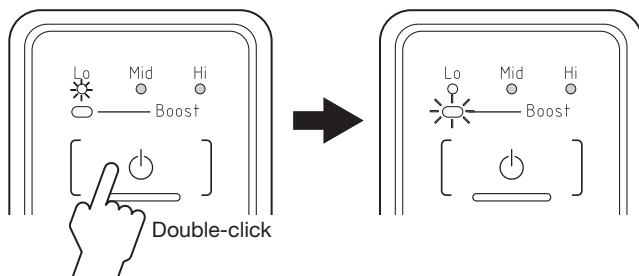


- ② When Boost mode ends, the temperature returns to the previous setting.

* To cancel Boost mode during operation, double-click the Power/Temperature button again.

* Boost mode can be activated even while Sleep mode is active.

■ Using the timer

- ① Press the Timer button during operation.

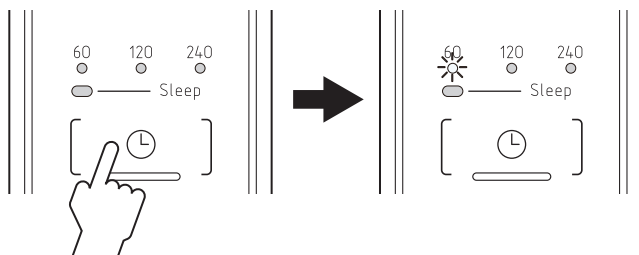

- ② Each time the Timer button is pressed, the set time changes.




* When the timer setting is changed, the timer is reset and starts again from the beginning.

■ Using Sleep mode


When Sleep mode is activated, the product automatically controls the temperature for 7.5 hours. After Sleep mode ends, the power turns off automatically.

① Double-click the Timer button during operation.

The Sleep indicator lights up.

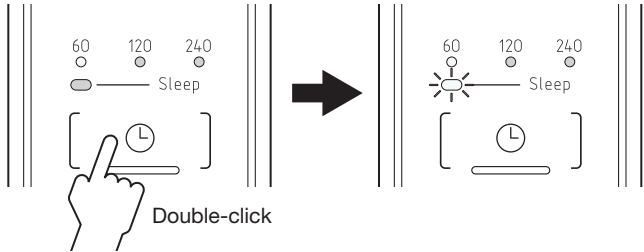

- * The temperature is adjusted in three stages according to the selected temperature setting.
- * To cancel Sleep mode during operation, double-click the Timer button again. The timer is reset, and the temperature setting returns to the setting used before Sleep mode was activated.
- * Boost mode can be activated even while Sleep mode is active.

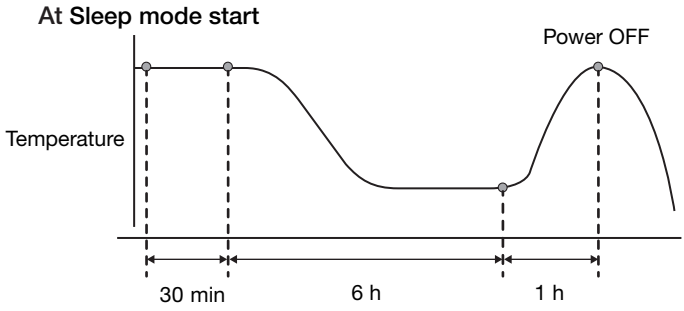

Sleep mode temperature control pattern

Temperature setting	30 min	6 h	1 h
Hi	50°C (122°F)	37°C (99°F)	42°C (108°F)
Mid	40°C (104°F)	33°C (91°F)	38°C (100°F)
Lo	30°C (86°F)	25°C (77°F)	30°C (86°F)

■ After use

- ① When you finish using the product, press and hold the Power/Temperature button on the controller to turn the power off.
- ② After confirming that the power is turned off, disconnect the power cable from the USB Type-C port of the power source.

Cleaning the product

■ Heater unit


						
Do Not Wash	Do not bleach	Do not tumble	Dry flat in shade	Do not iron	Do Not Dry Clean	Do Not Wet Clean

- ! The heater unit cannot be washed.
- If it becomes dirty, be sure to unplug the power plug, and wipe it gently with a well-wrung damp cloth.
- Do not use solvents such as paint thinner and benzene.

■ Heater unit cover

- ! Remove the heater unit before washing the cover.

- 1 Remove the heater unit from the heater unit cover.

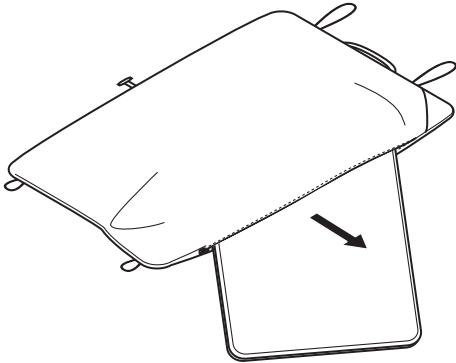

- 2 Wash the heater unit cover according to the care label instructions.


						
Hand wash only	Do not bleach	Do not tumble	Line dry in shade	Do not iron	Do Not Dry Clean	Do Not Wet Clean

- ! Use a neutral detergent.
- When drying, avoid direct sunlight and heat.
- Place the item in a laundry net when spin-drying.
- Note that strong friction while the item is wet may cause color transfer or fading.
- To prevent color transfer and fabric deterioration, do not leave the item wet for an extended period.


Storing the product

■ For compact storage

- ① Make sure that the heater unit has cooled down. (This confirmation step is required for safety.)
- ② Store the controller and the power cable in the controller pocket of the heater unit cover.

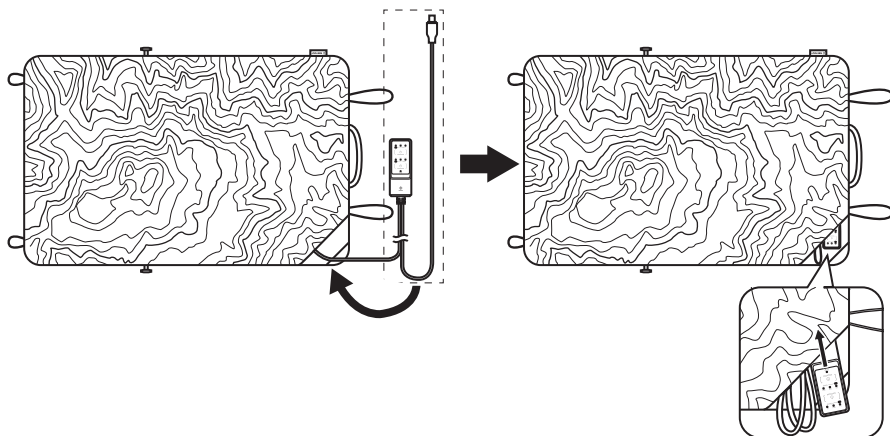

- ③ Roll up the main unit and secure it with the straps and hooks.

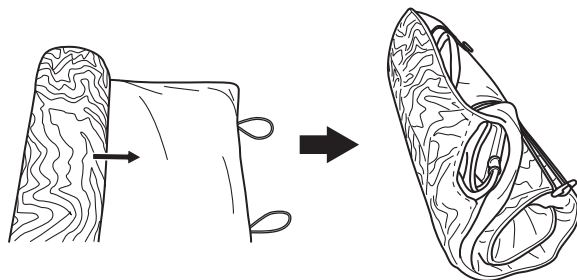

■ Storage environment

Store the product in an environment that meets the following conditions:

Storage temperature: -10°C to 40°C (14°F to 104°F)

Storage humidity: 20% to 60% RH

■ Precautions for storage


- Do not store the product in the following places:
 - Places exposed to direct sunlight
 - Hot, humid, or dusty places, or places near water
 - Places with a lot of vibration
 - Places where chemicals are stored or where corrosive gases may be generated.
- Keep the product out of reach of children.
- If the product will not be used for a long time, store it at room temperature (10 to 30°C/50 to 86°F) whenever possible.

Error indication

Self-check function

The product has a self-check function to detect malfunctions and output conditions of the connected power source.

The self-check runs automatically when the power is connected. During the self-check, the indicators light up and then turn off.

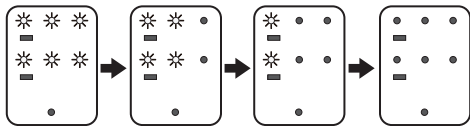

The self-check takes approximately 3 seconds, and no operations such as turning the power on can be performed until the process is completed.

Error indicator

If the self-check detects an error, the Error indicator lights up and the power cannot be turned on.

The lighting pattern varies depending on the type of the error.

Lighting pattern	Status	Error description
All indicators continue to flash at 0.5 second intervals. 	Error detected (Component damage)	Component damage has been detected. Stop using the product and consult your dealer.
All indicators remain lit. 	Error detected	An error condition such as overvoltage, overcurrent, or excessive heat in components has been detected, and the protection function has been activated. Disconnect the USB Type-C plug, wait for a while, then reconnect the USB plug and turn the power on again. If the error persists, the product may be broken. Stop using the product and consult your dealer.
Only the Error indicator continues to flash at 0.5 second intervals. 	Insufficient power output conditions	The connected power source does not meet the required operating conditions. Confirm that the power source supports 20 V/3 A (60 W output). When using a multi-port AC charger, disconnect all cables, reconnect only the USB Type-C plug of the product, and check whether it operates normally. *With some AC chargers, portable power stations, or power banks, it may not operate normally.

Troubleshooting

Problem	Possible cause	Solution
The power does not turn on.	Insufficient power output	Confirm that the connected power source supports 20 V/3 A (60 W output). *With some AC chargers or power banks, the protection function may be activated and stop the output, or the power may turn off during temperature adjustment. Note that compatibility with all power sources is not guaranteed.
	The protection function has been activated due to overvoltage, abnormal heating in the heater, or other reasons.	Disconnect the USB Type-C plug, wait for a while, then reconnect the USB plug and turn the power on again. If the problem persists, consult your dealer.
	Internal component damage	Stop using the product immediately and consult your dealer.
	The USB Type-C plug is not securely connected.	Firmly insert it all the way into the USB port of the power source.
	The portable power station or power bank is discharged	Charge the portable power station or power bank.
	Poor contact of the USB Type-C plug	Check the condition of the USB Type-C plug.
The power turns off immediately. The power turns off automatically during use.	The power source supports 20 V but lacks sufficient current or output.	- Confirm that the connected power source supports 20 V/3 A (60 W output). - When using an AC charger, connect the product to a single-port AC charger that has a 65 W or higher capacity.

Specifications

Input terminal	USB Type-C connector (USB Power Delivery compatible)
Rated input voltage	20 VDC
Rated input current	3 A
Rated power consumption	60 W
Timer	60 min, 120 min, 240 min, Sleep mode (7.5 h)
Temperature setting	Lo: approx. 30°C (86°F); Mid: approx. 40°C (104°F); Hi: approx. 50°C (122°F); Boost: approx. 55°C (131°F)
Main unit size	Heater unit: W430 x D680 mm (16.93 x 26.78 in.) With heater unit cover attached: W450 x D700 mm (17.72 x 27.56 in.)
Weight	Approx. 960 g (33.86 oz)
Operating environment temperature and humidity	-10°C to 40°C (14°F to 104°F); 20% to 60% RH
Storage environment temperature and humidity	-10°C to 40°C (14°F to 104°F); 20% to 60% RH
Materials	Heater unit Surface fabric: 100% polyester Filling: Polyurethane foam, EVA, SBR Heater unit cover Surface fabric: 100% polyester Backing fabric: 80% polyester, 20% cotton
Country of origin	China

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Responsible party

ELECOM USA, Inc.
2102 Business Center Drive Irvine,
CA 92612 USA
elecomusa.com



European Authorized Representative (For CE and GPSR matters only):

VISHTEC Ltd

3rd floor office 5, Plovdiv 2 Liuben Karavelov bul, 4002 Bulgaria
compliance@vish-tec.com



WEEE Disposal and Recycling Information

This symbol means that waste of electrical and electronic equipment (WEEE) should not be disposed as general household waste. WEEE should be treated separately to prevent possible harm to the environment or human health. Consult your retailer or local municipal office for collection, return, recycle or reuse of WEEE.

Trademark and name of the manufacturer:

ELECOM CO., LTD.

Fushimimachi 4-1-1, Chuo-ku, Osaka City
www.elecom.co.jp/global/

- ELECOM CO., LTD. owns the copyright of this manual.
- Unauthorized copying and/or reproducing of all or part of this manual is prohibited.
- If you have any concerns or question regarding this manual, please contact the retailer from whom you purchased this product.
- In order to make improvements to this product and for improved safety, the colors and specifications are subject to change without prior notice.
- We shall bear no responsibility for any device failure or malfunction of other devices resulting from the use of this product.
- When exporting this product, check the export regulations for the country of origin.
- The images are for illustration purposes only and may differ from your actual product.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- The company and product names on the packaging and the manual are, in general, trademarks or registered trademarks of their respective companies.

Global Support



A customer who purchases outside Japan should contact the local retailer in the country of purchase for inquiries. In "ELECOM CO., LTD. (Japan)", no customer support is available for inquiries about purchases or usage in/from any countries other than Japan. Also, no language other than Japanese is available. Replacements will be made under stipulation of the ELECOM warranty.

Heater Pad

Model: OD-NESTHP1

Manual, Safety precautions, and Compliance with regulations

1st edition, June, 2026

ELECOM

©2026 ELECOM Co., Ltd. All Rights Reserved.

MEMO

MEMO



Multilingual manual

www.elecom.co.jp/m/P2327

OD-NESTHP1

ELECOM